



305400

Illustrated Parts List

Model Series

305400

AIR COOLED

 
TYPE NUMBERS
0005 to 3087.

Not for
Reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.








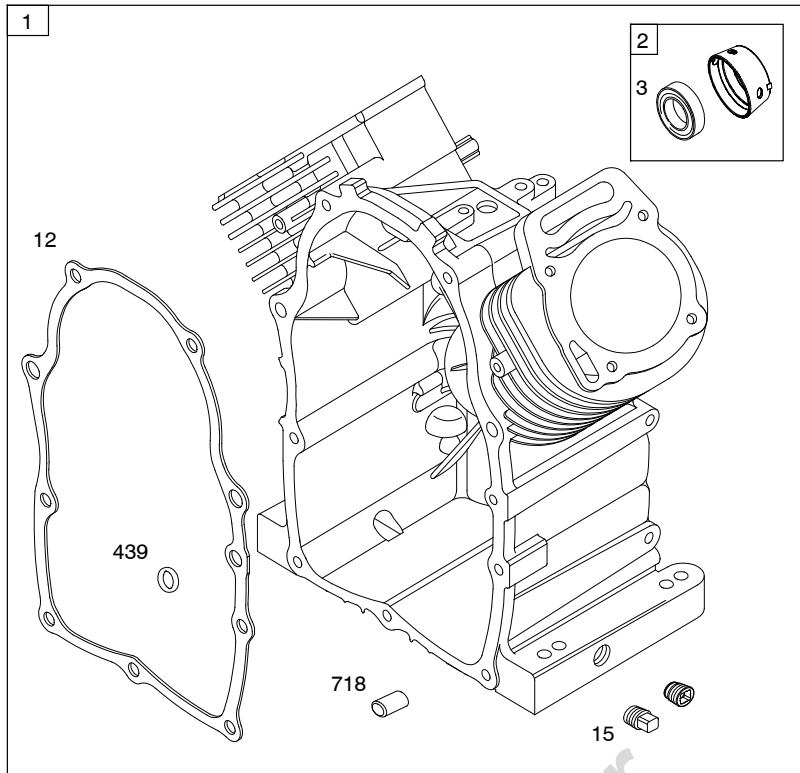


- 1036 EMISSIONS LABEL
- 1058 OPERATOR'S MANUAL
- 1330 REPAIR MANUAL
















1319 WARNING LABEL





WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.

       
 
REQUIRED when replacing parts with warning labels affixed.

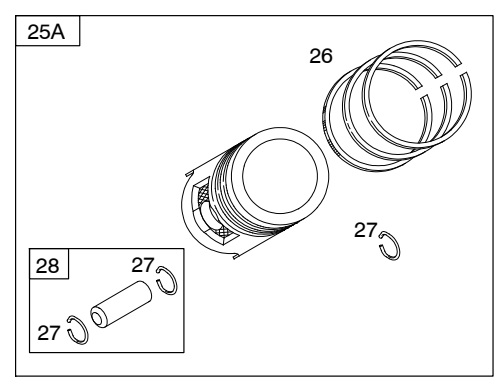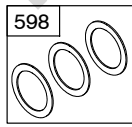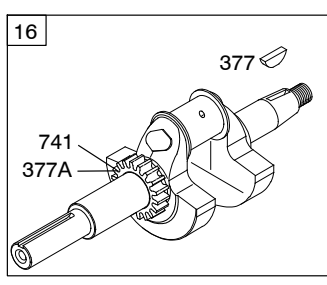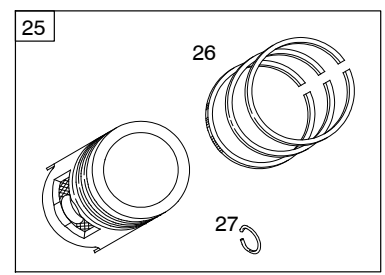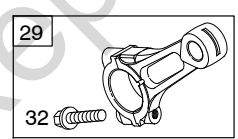

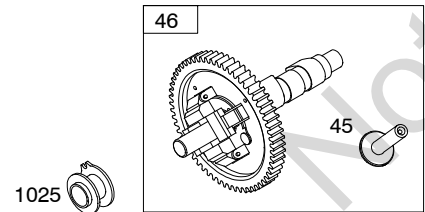
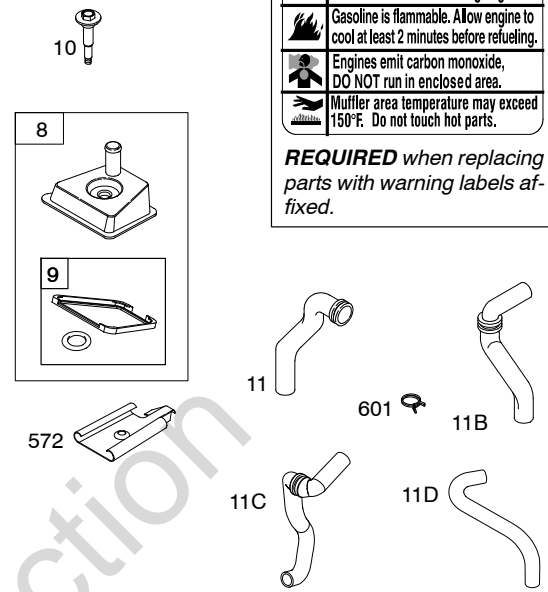





1133

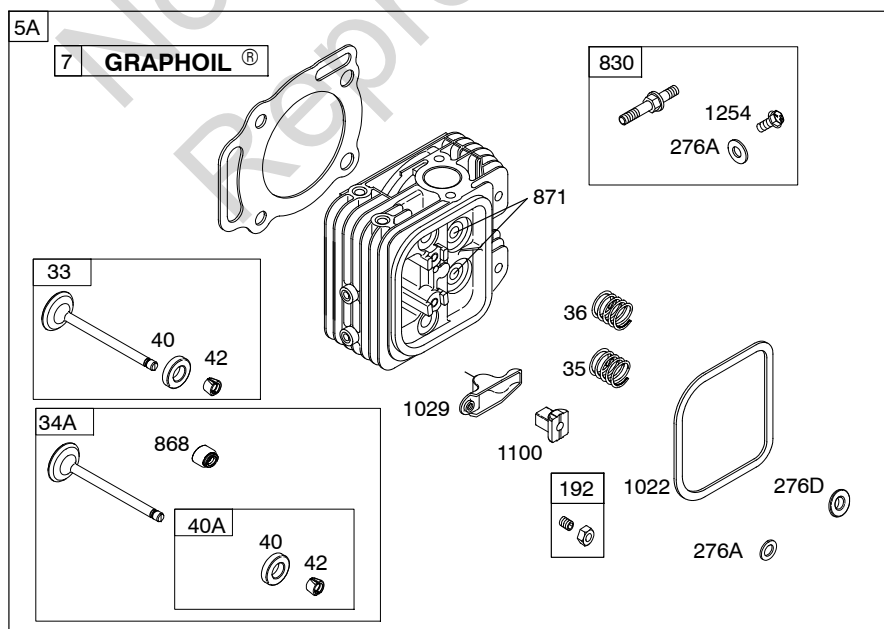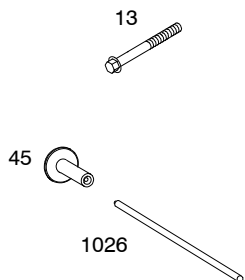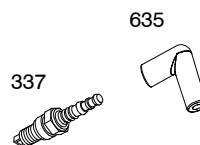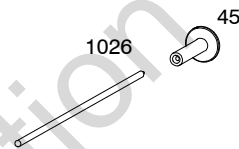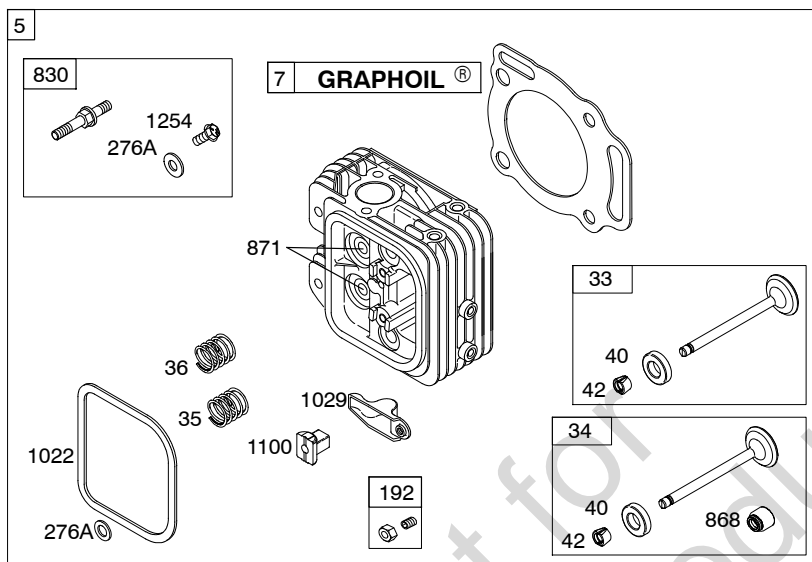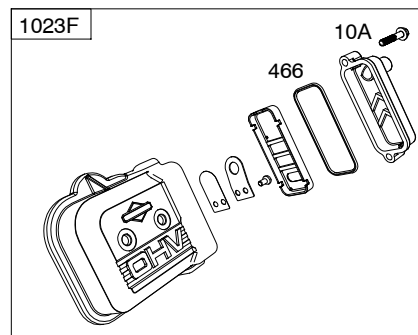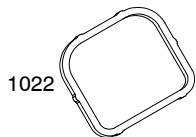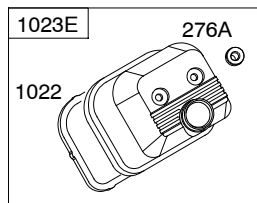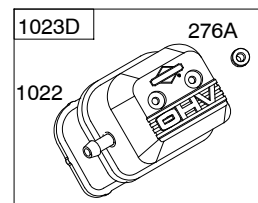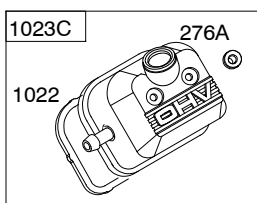             
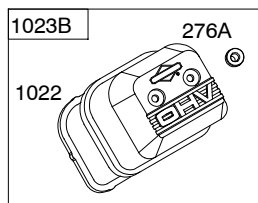 
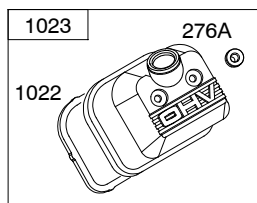 


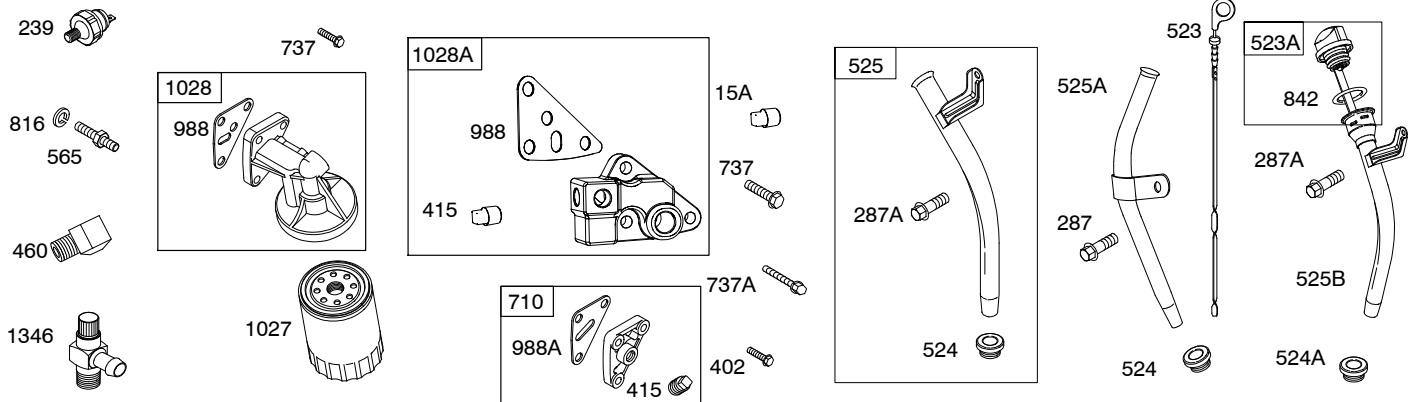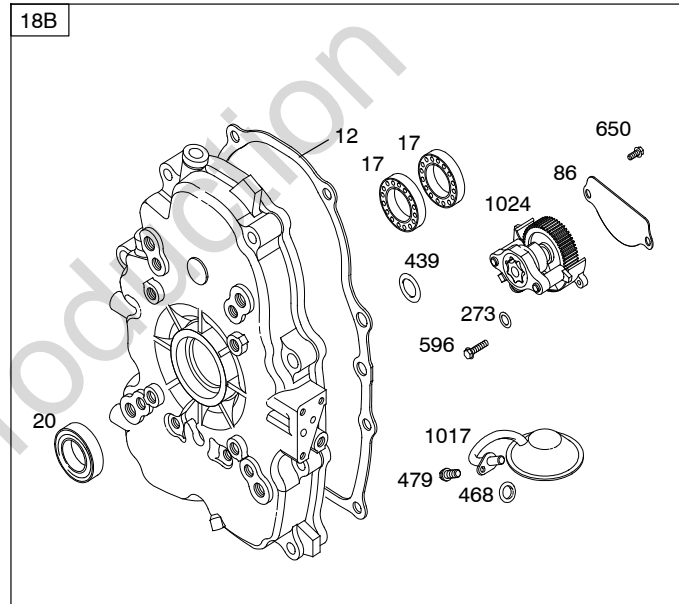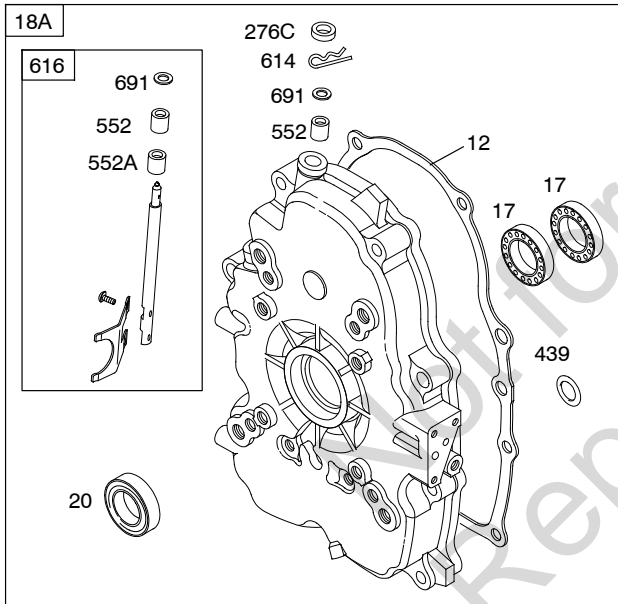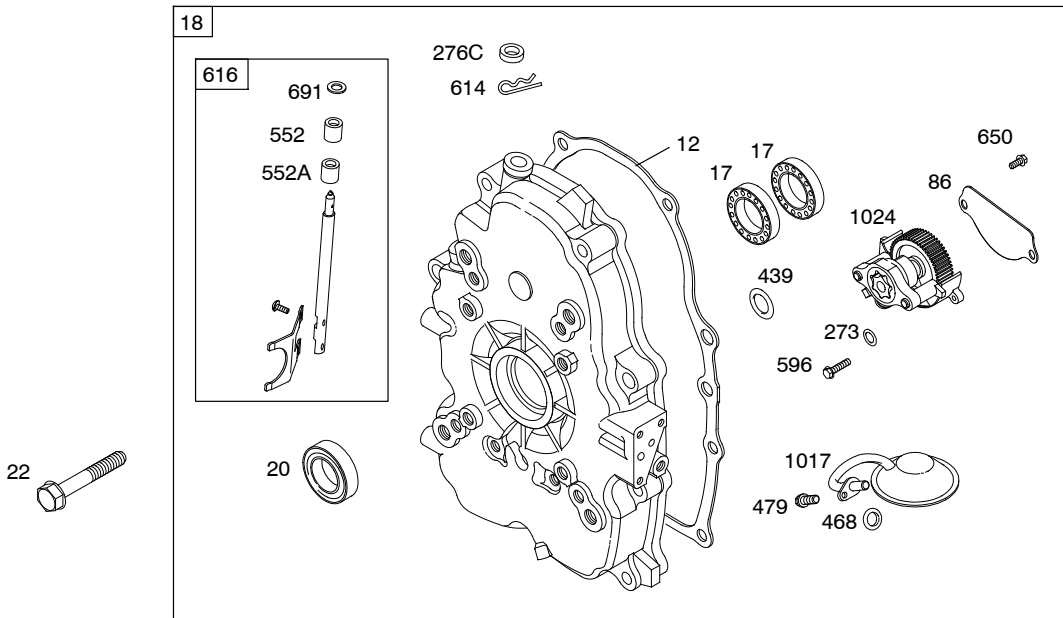    


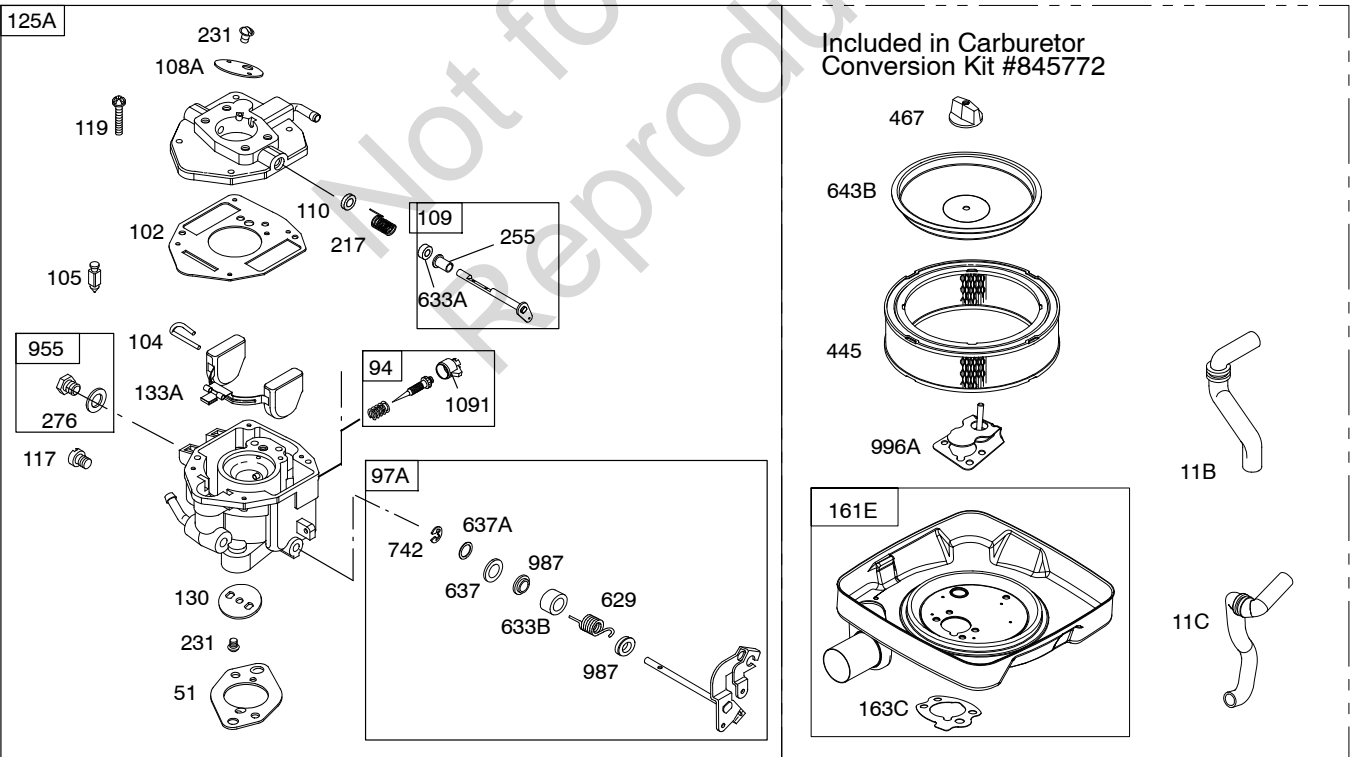 
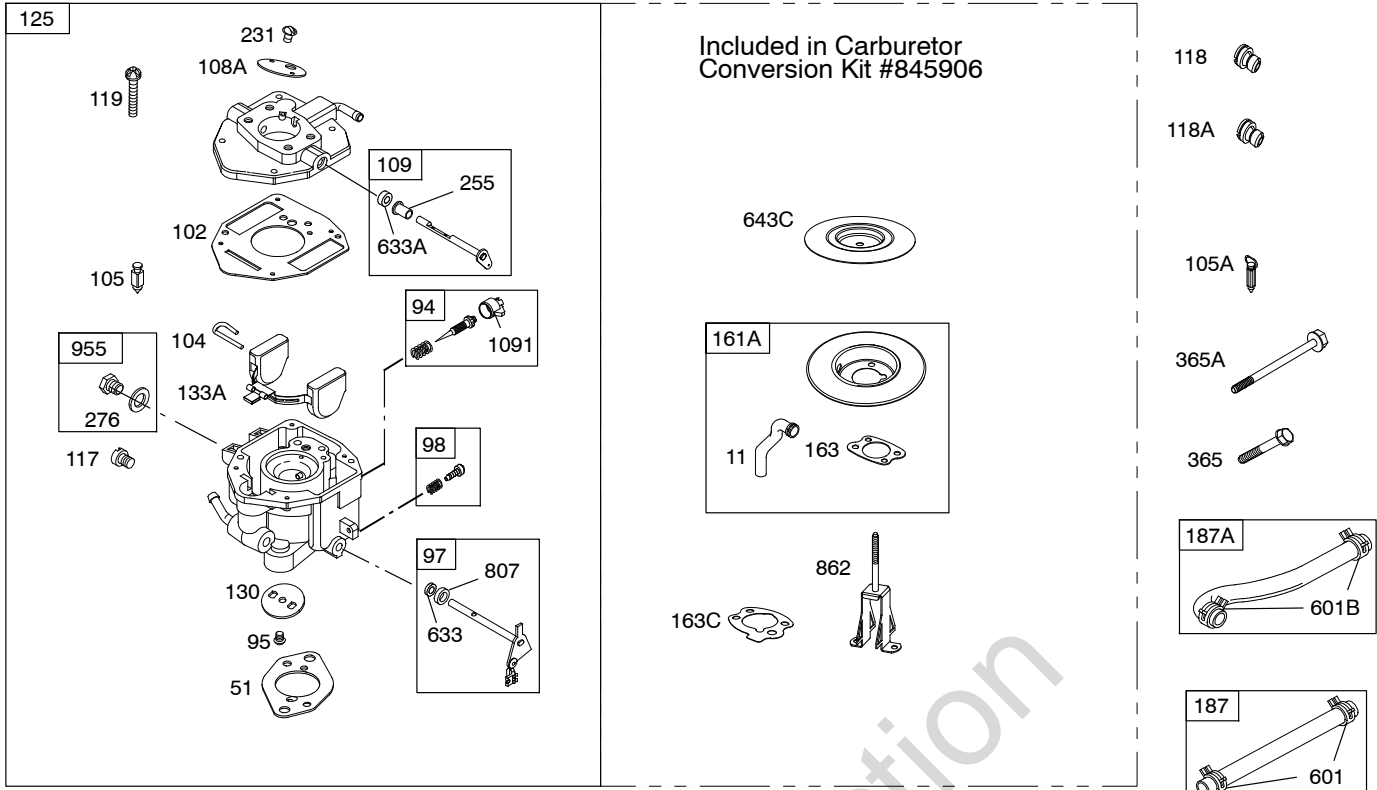 


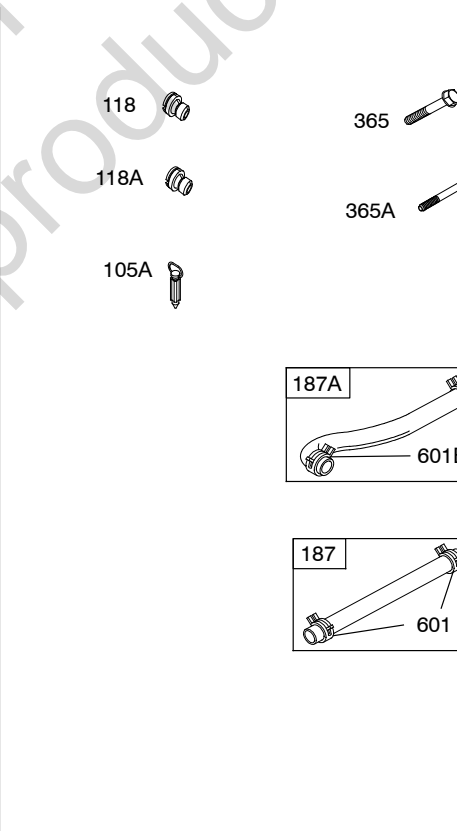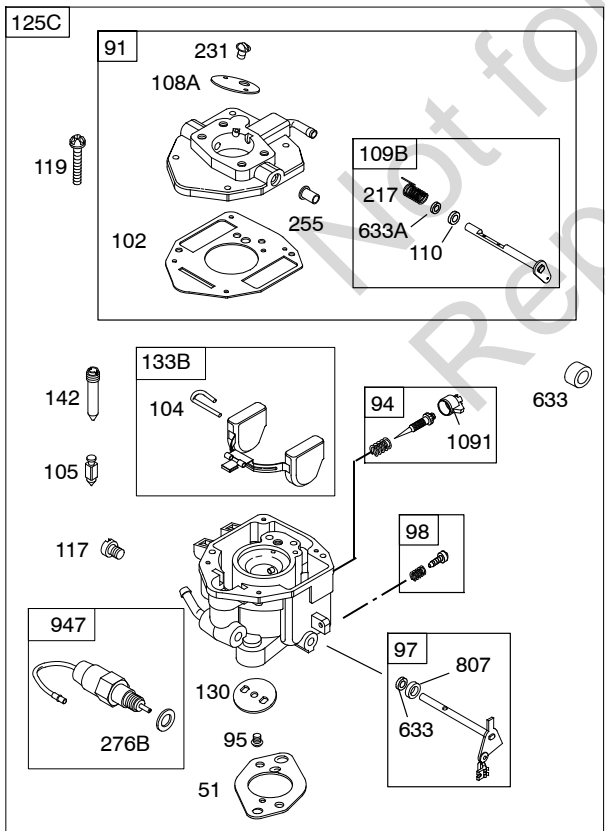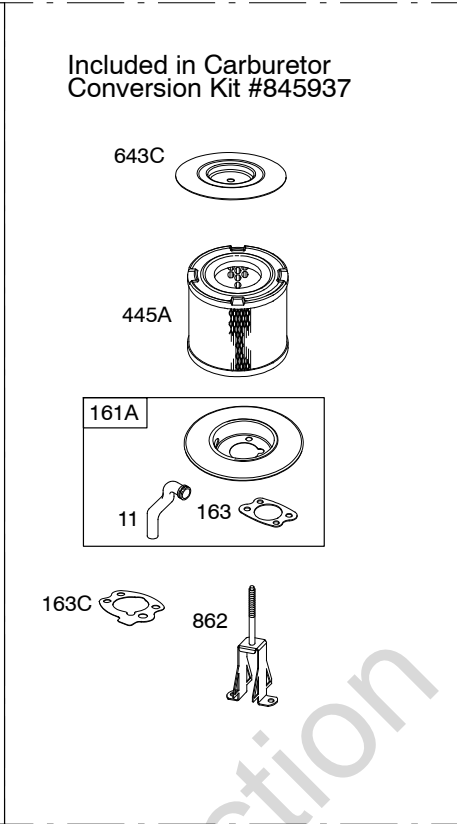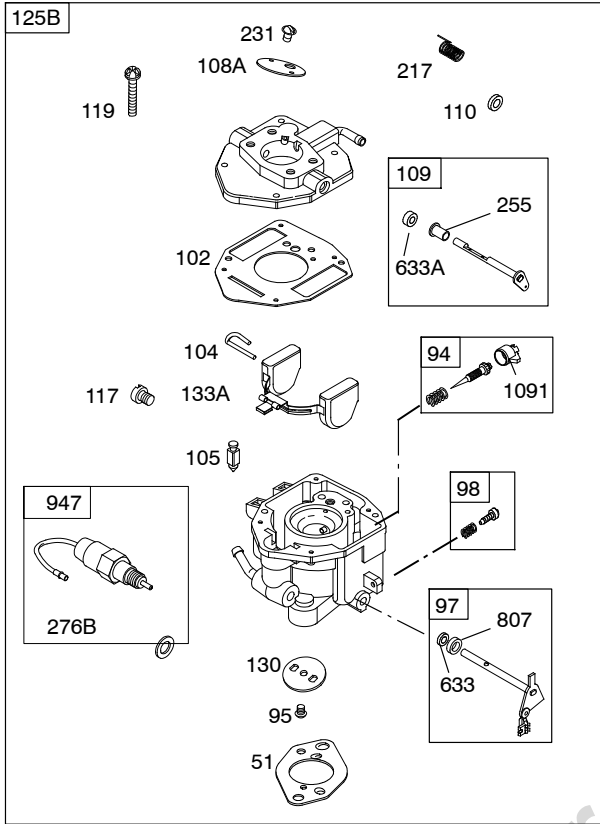    


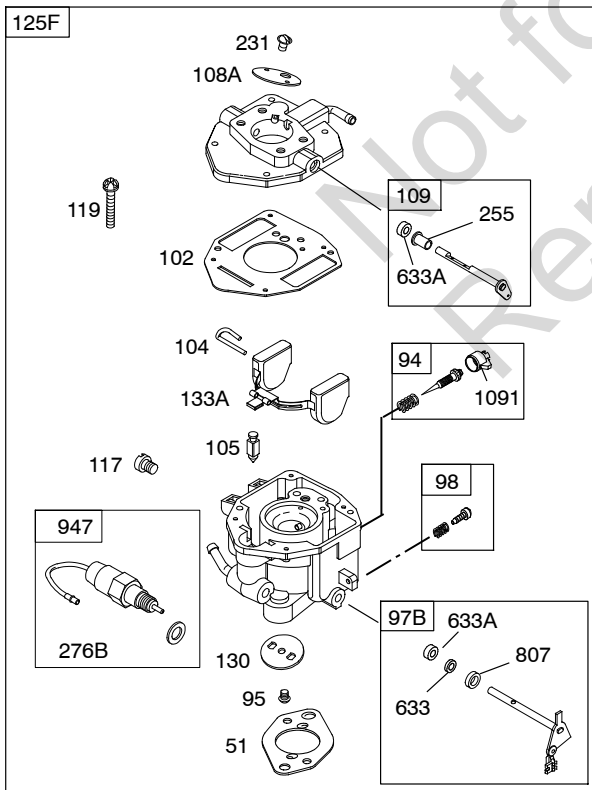           
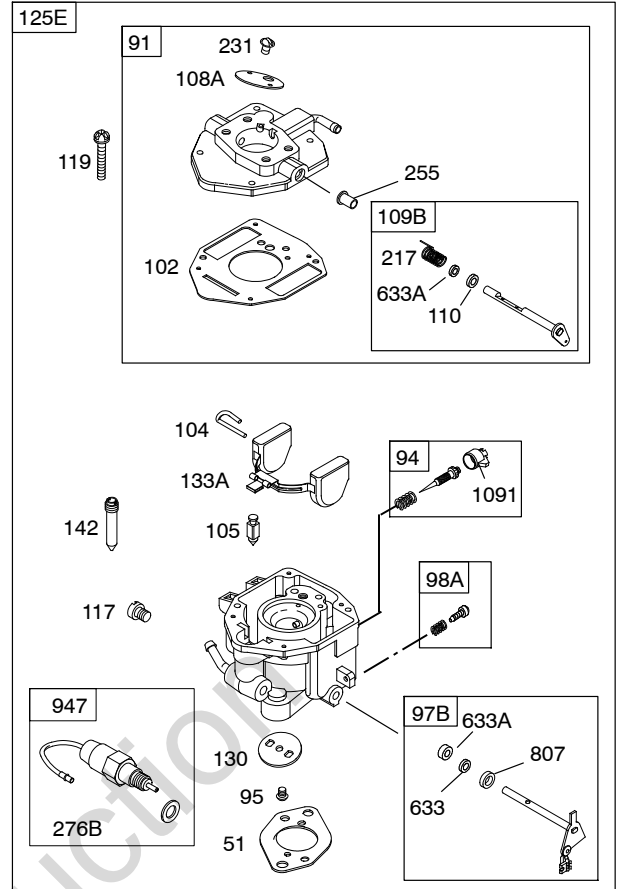 
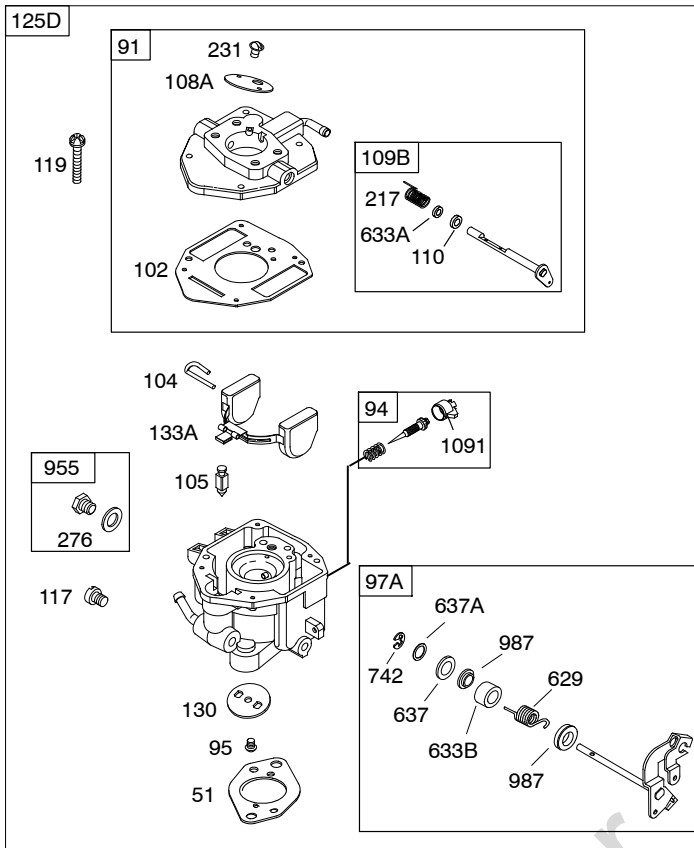 


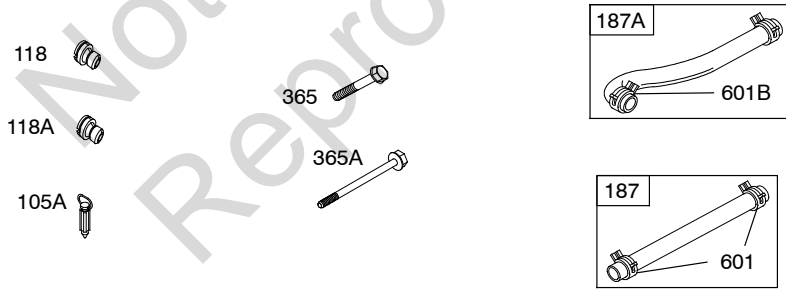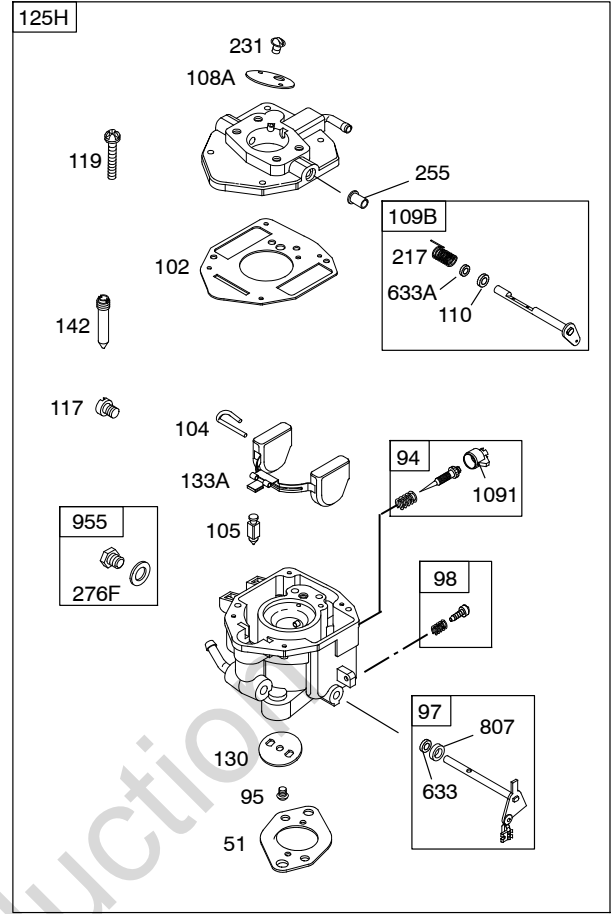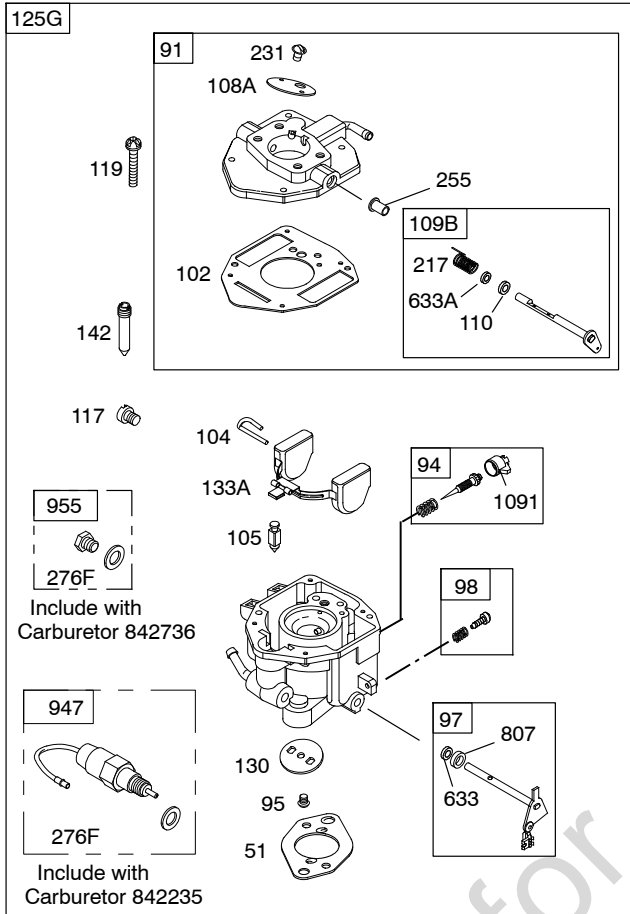

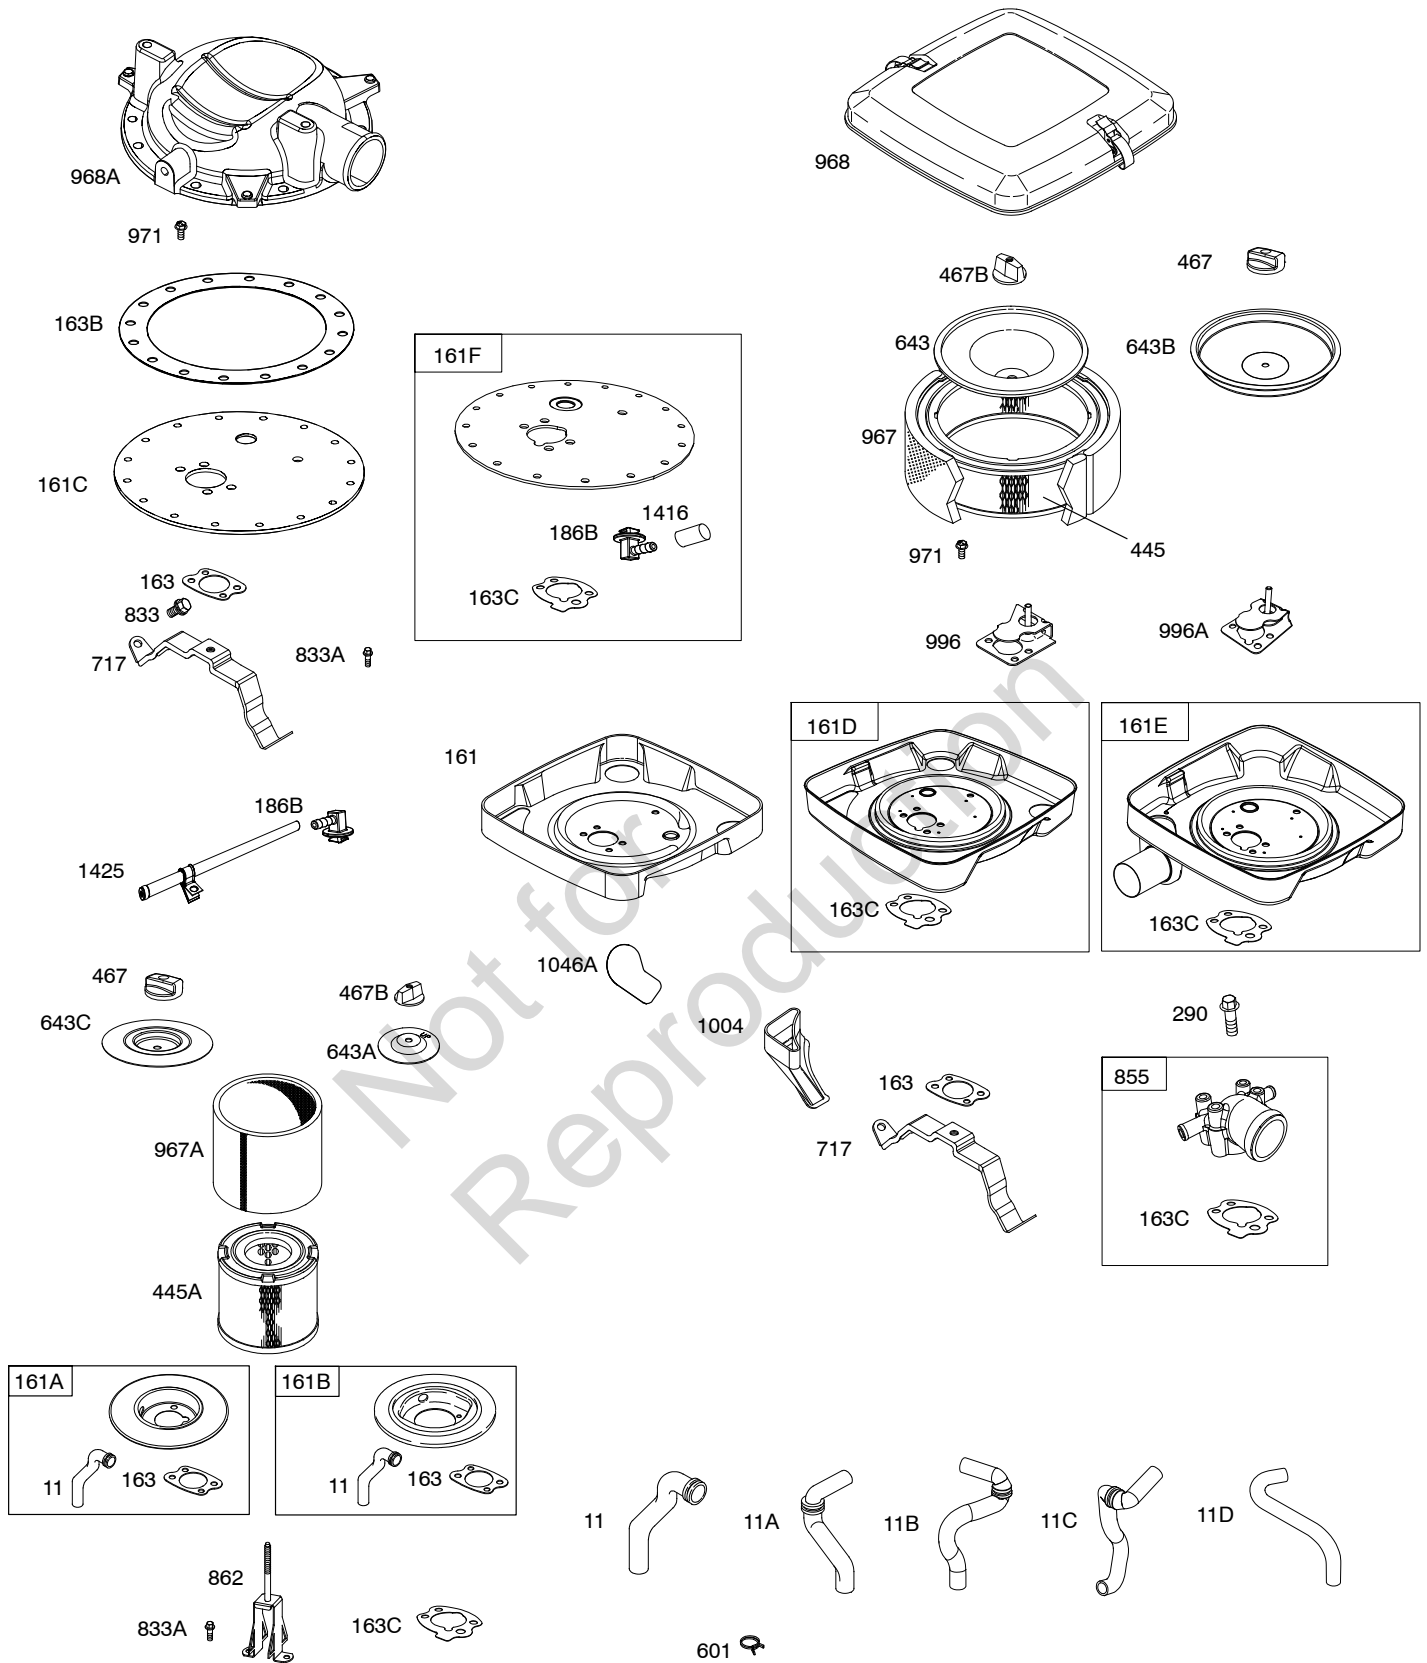


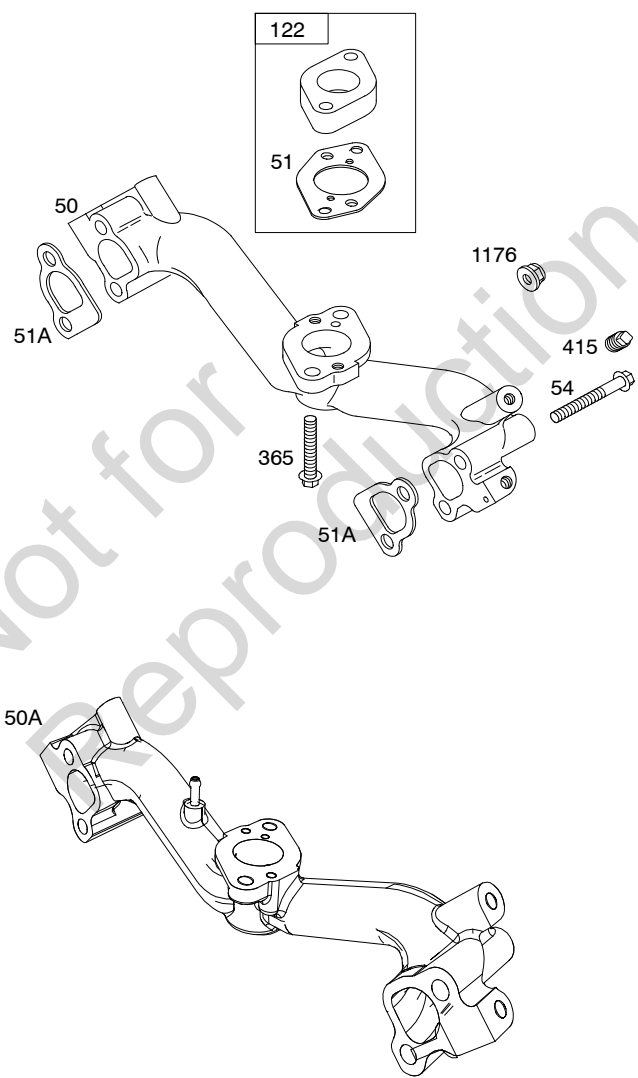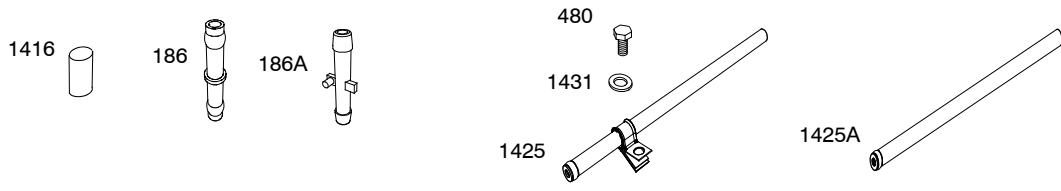

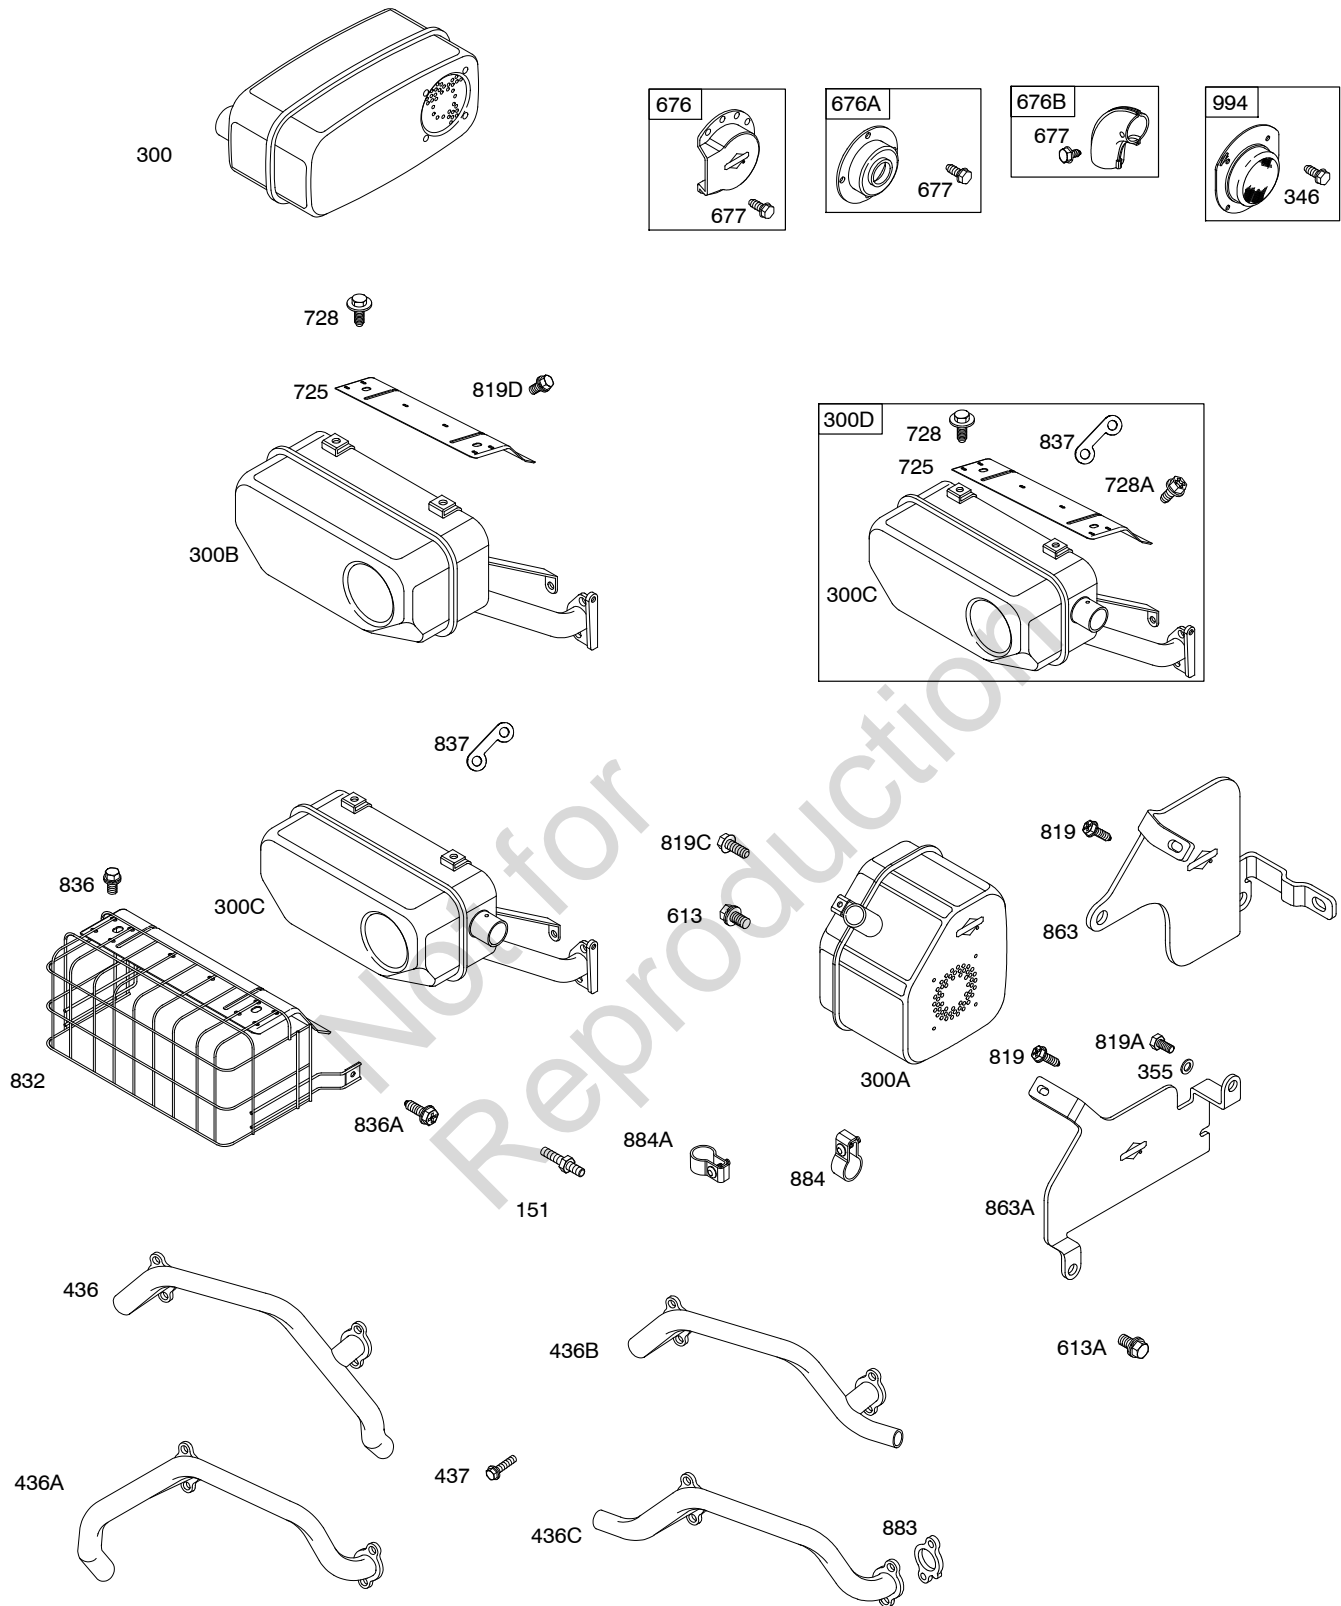


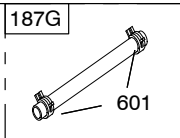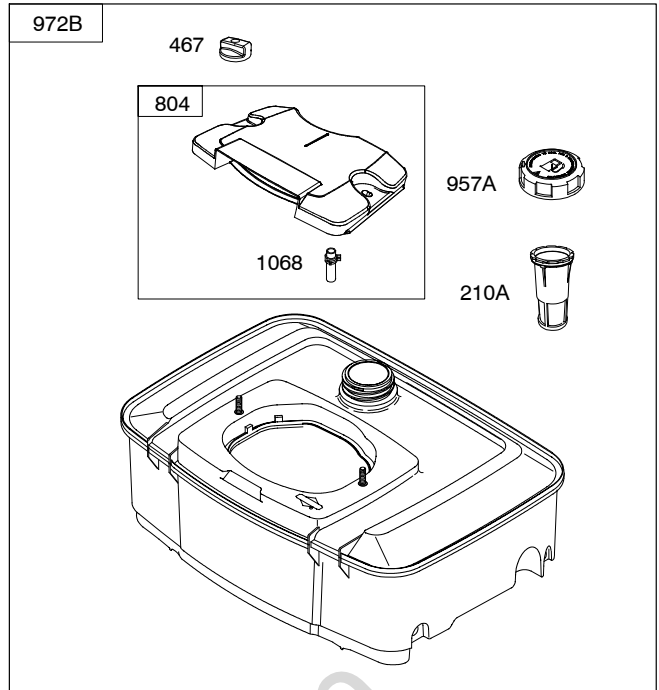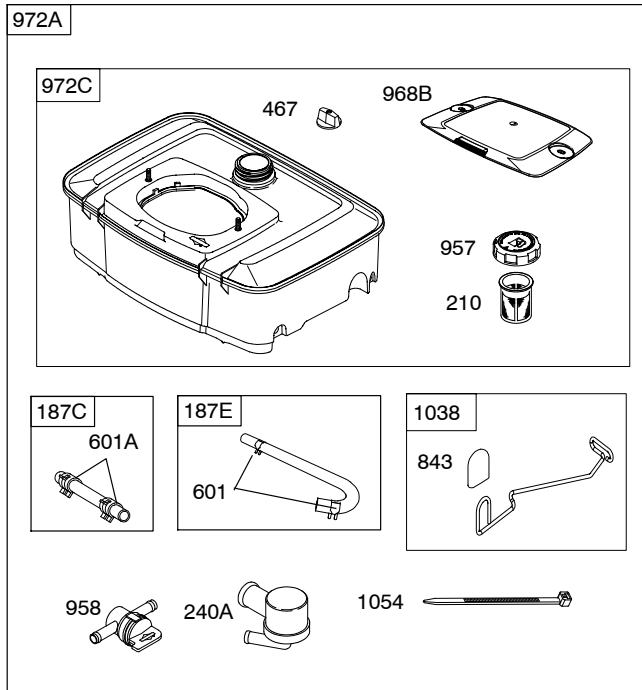













Included in Fuel Tank Service #845137

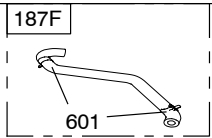 



Included in Fuel Tank Service #845138

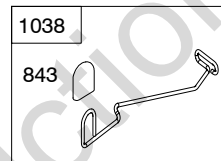 

529A

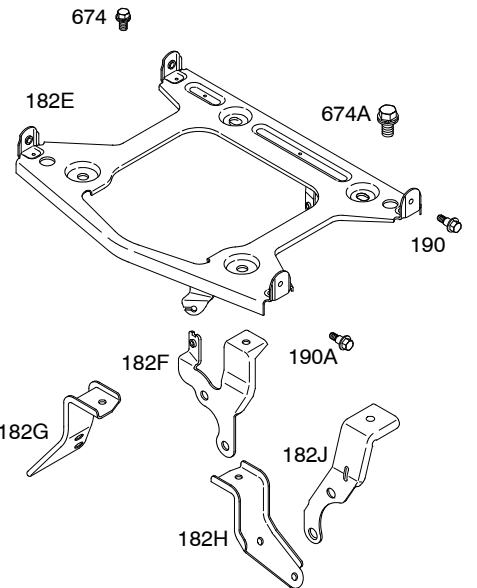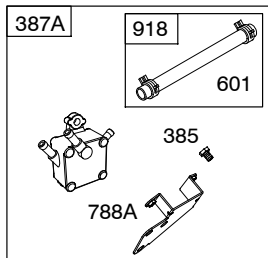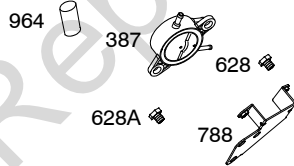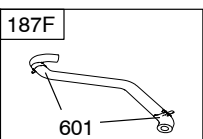            


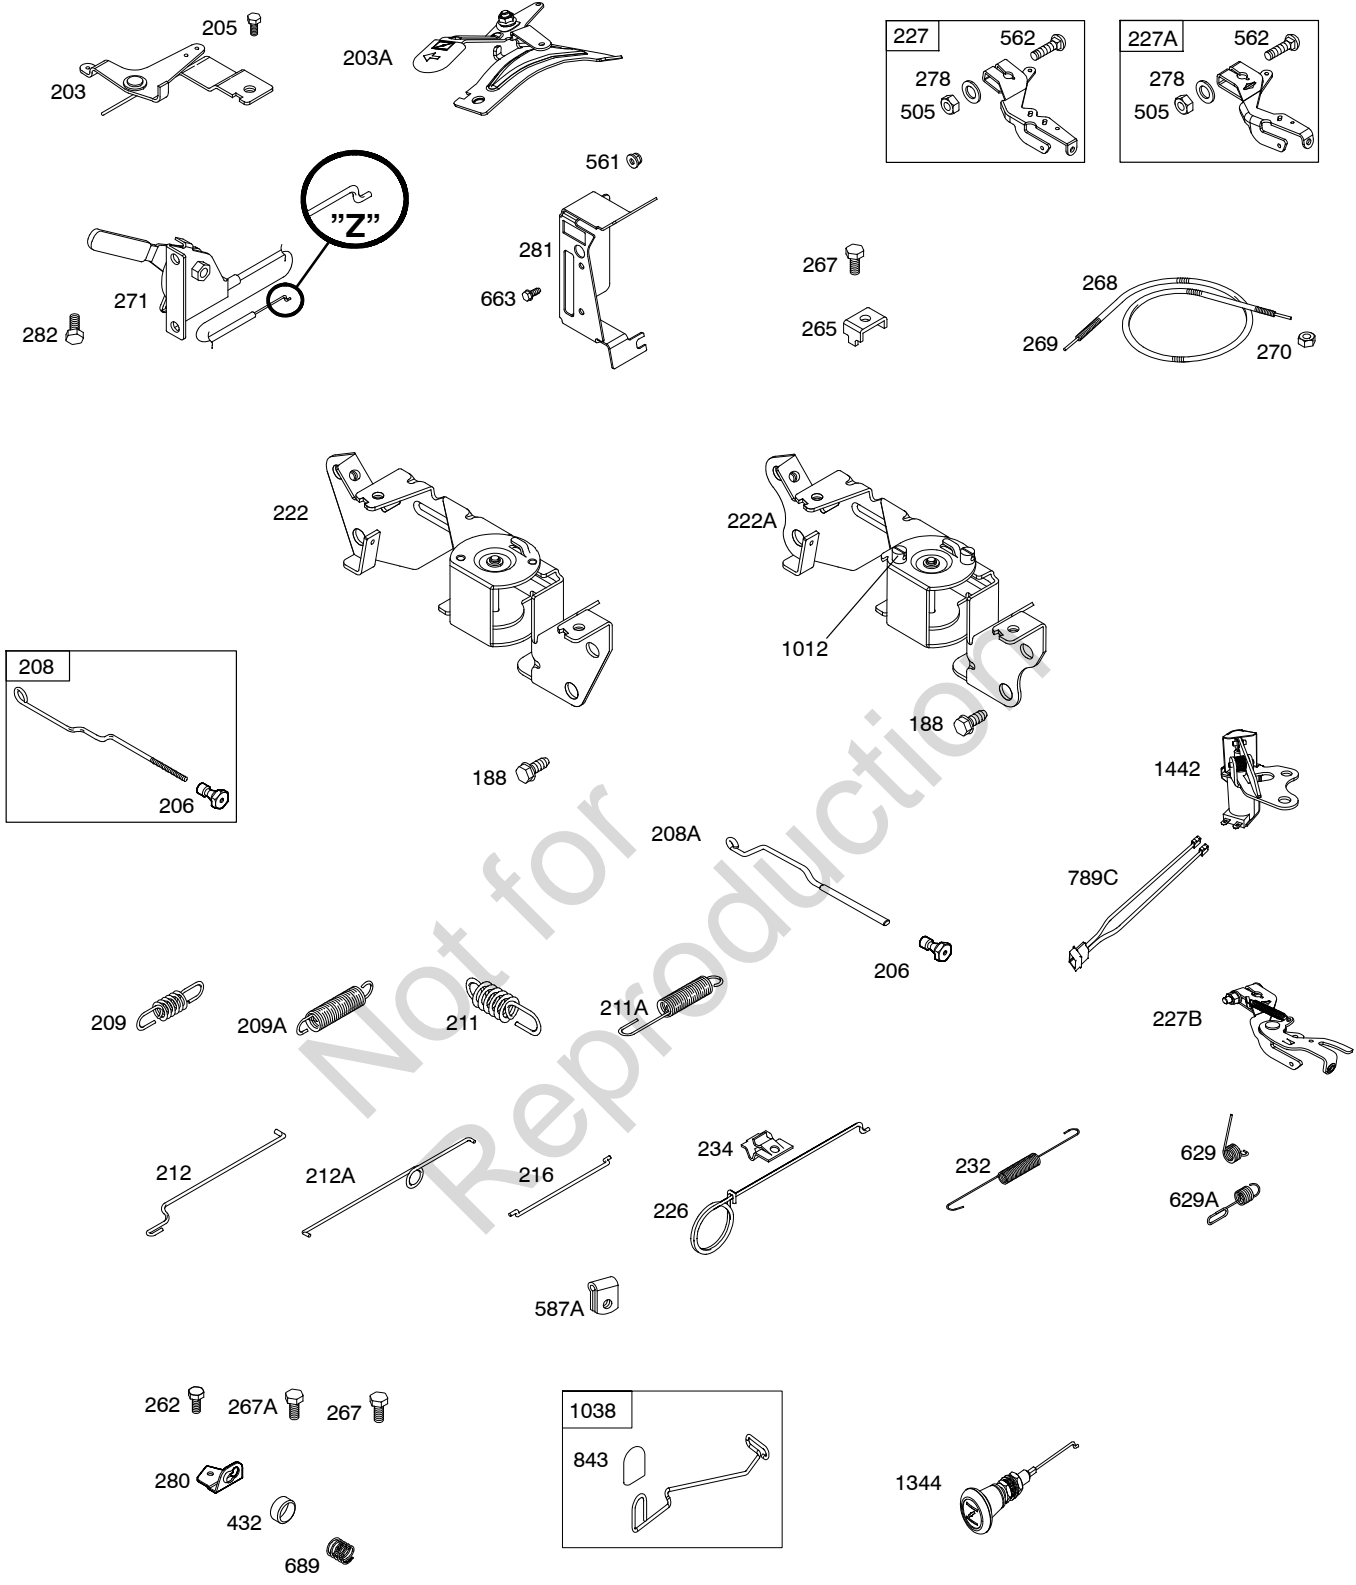 




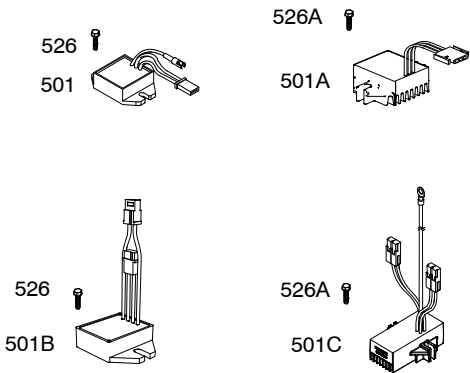 







DUAL CIRCUIT		10 - 16 AMP		20 AMP		20 AMP POWER LINK	
474	1059	474A	1059	474B	1059	474C	

           
NOTE: All stators use a No. 1119 mounting screw.

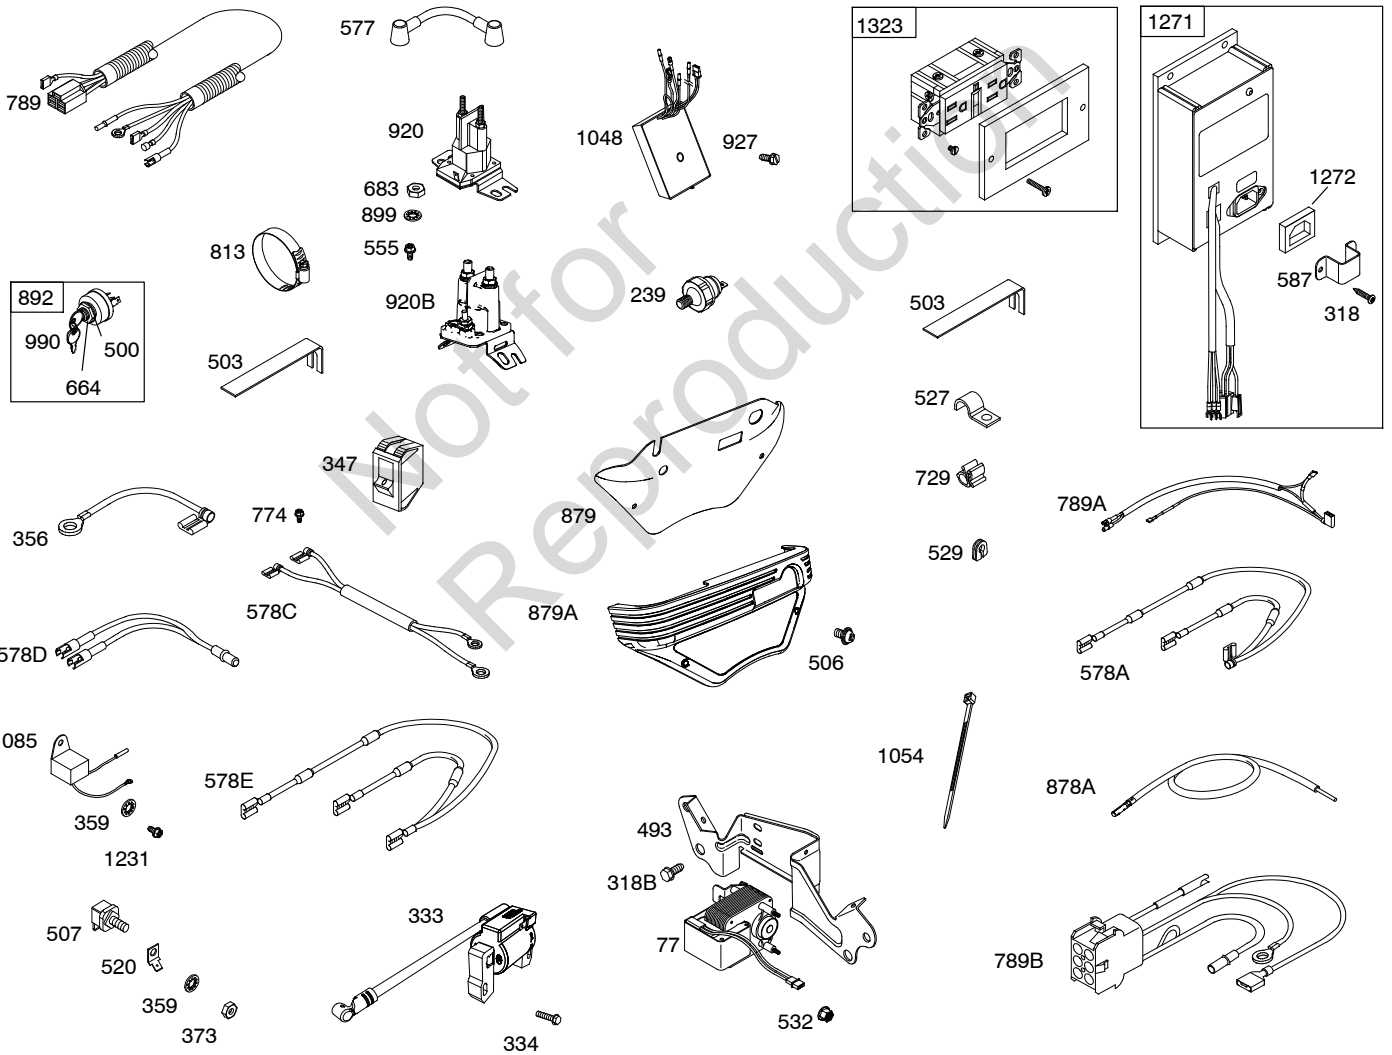 


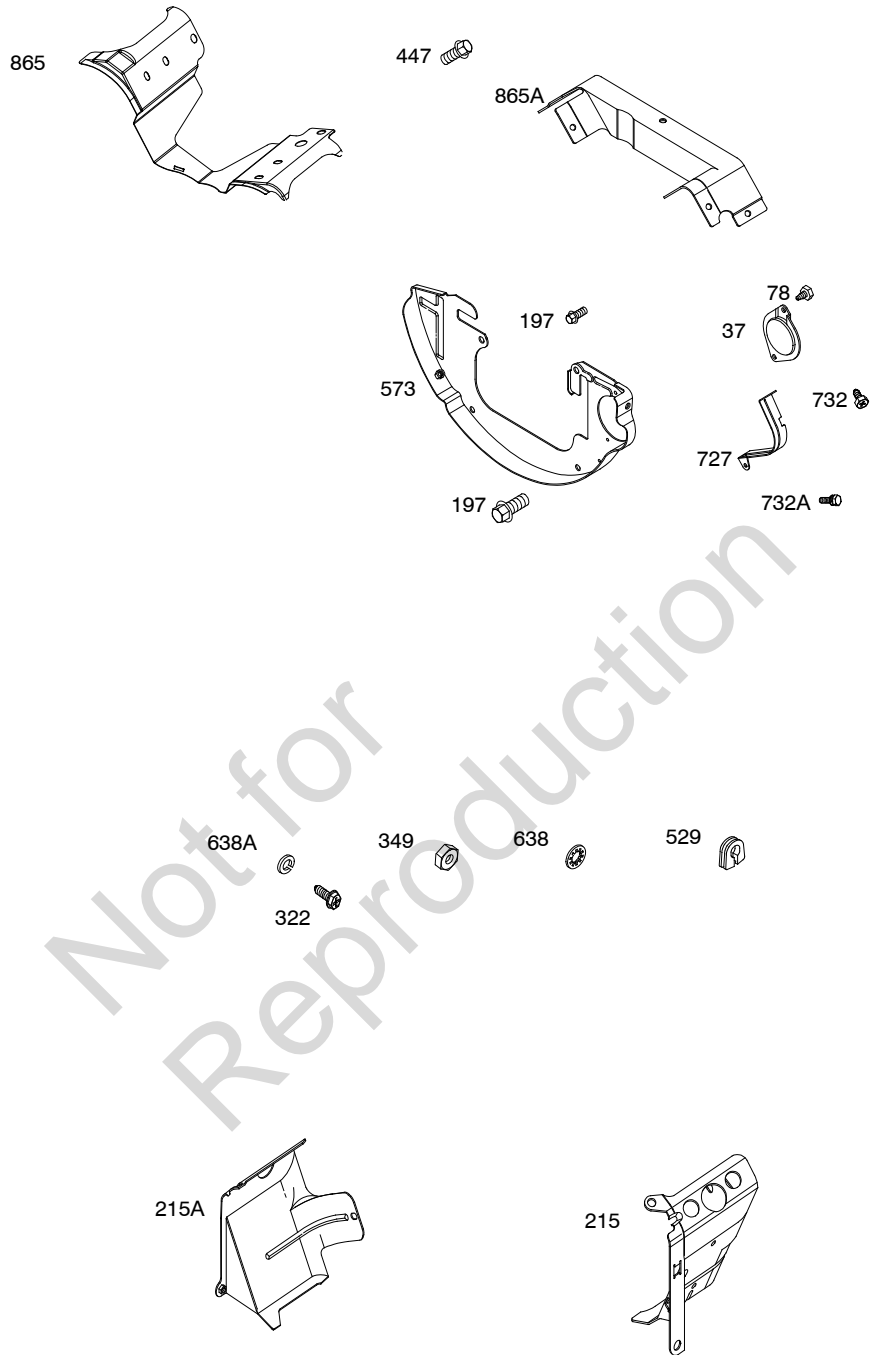

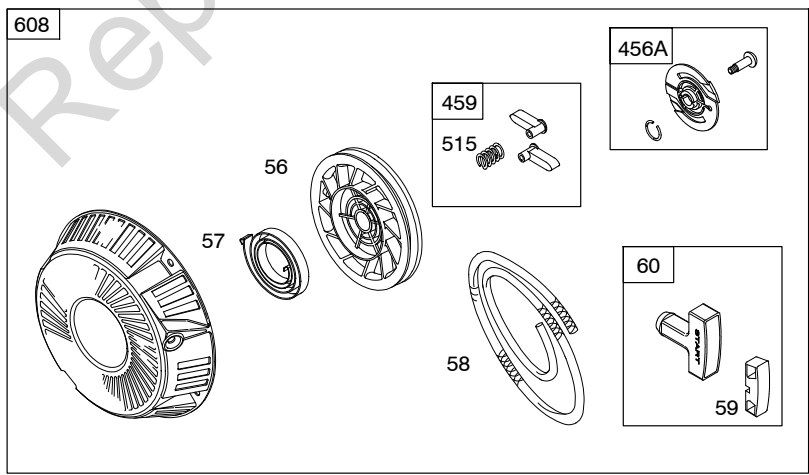
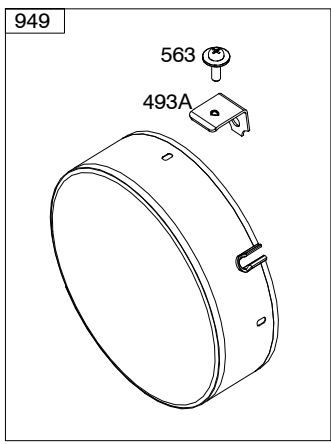
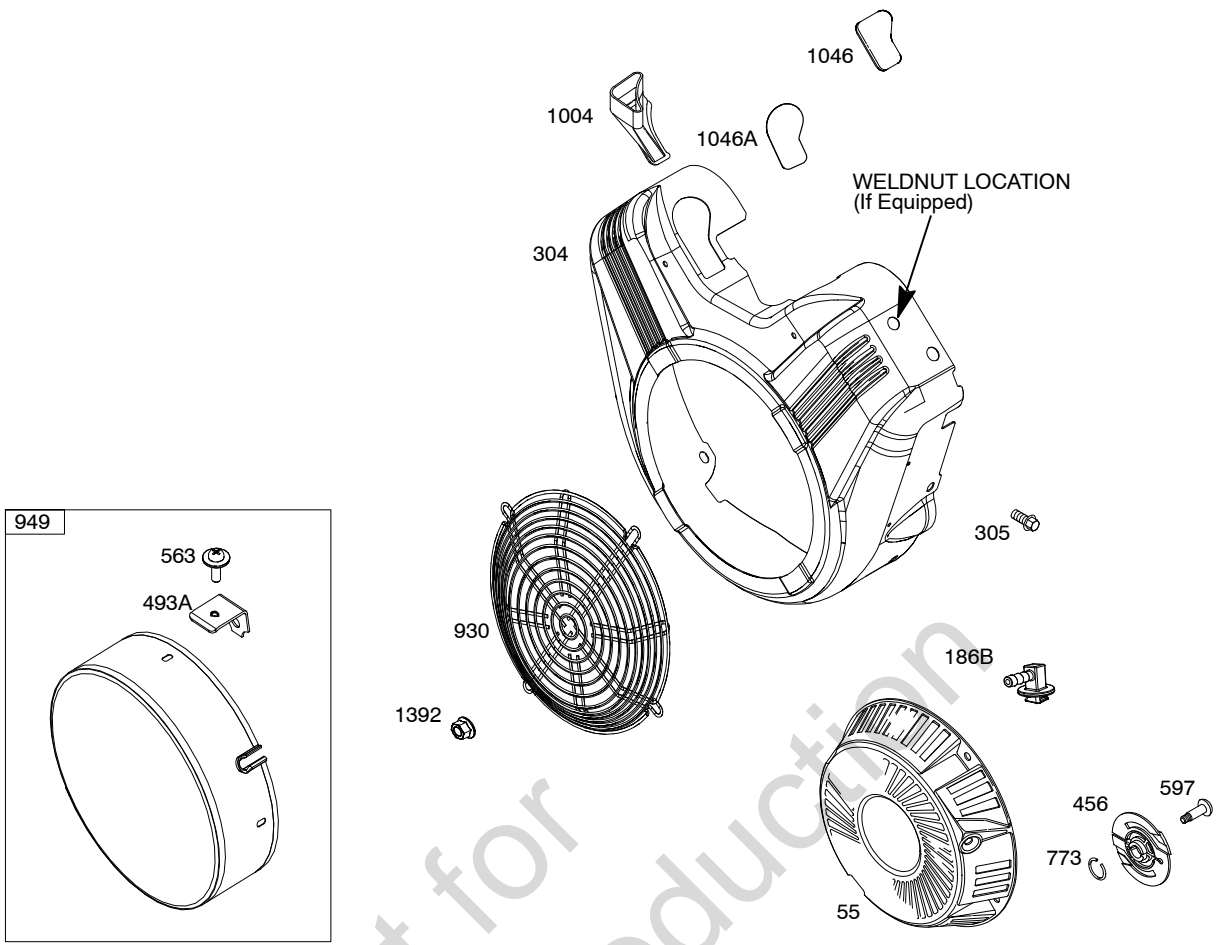


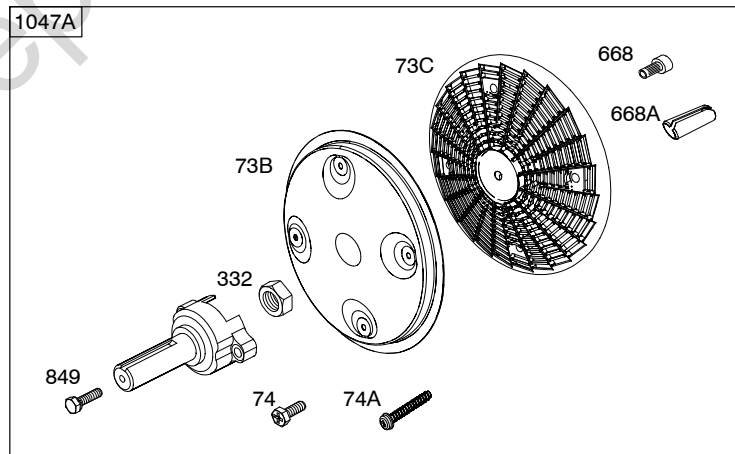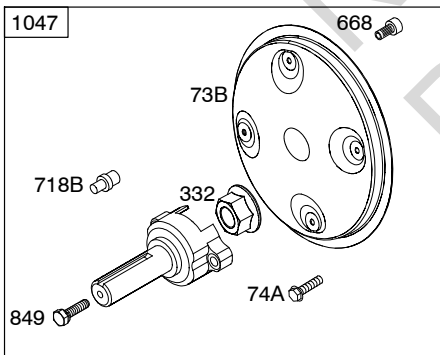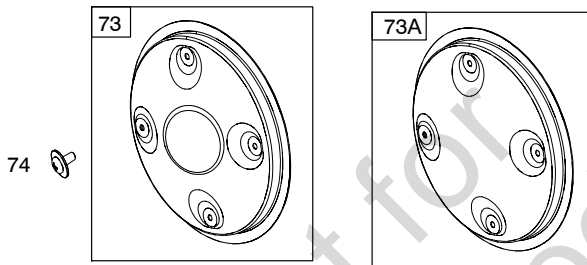
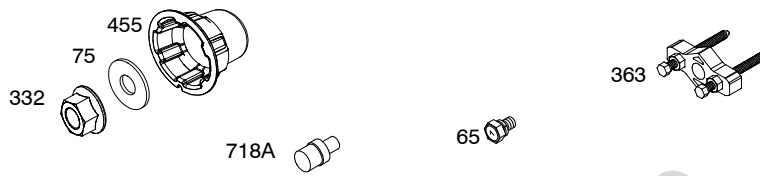
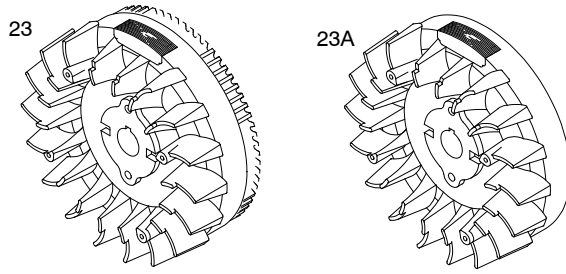


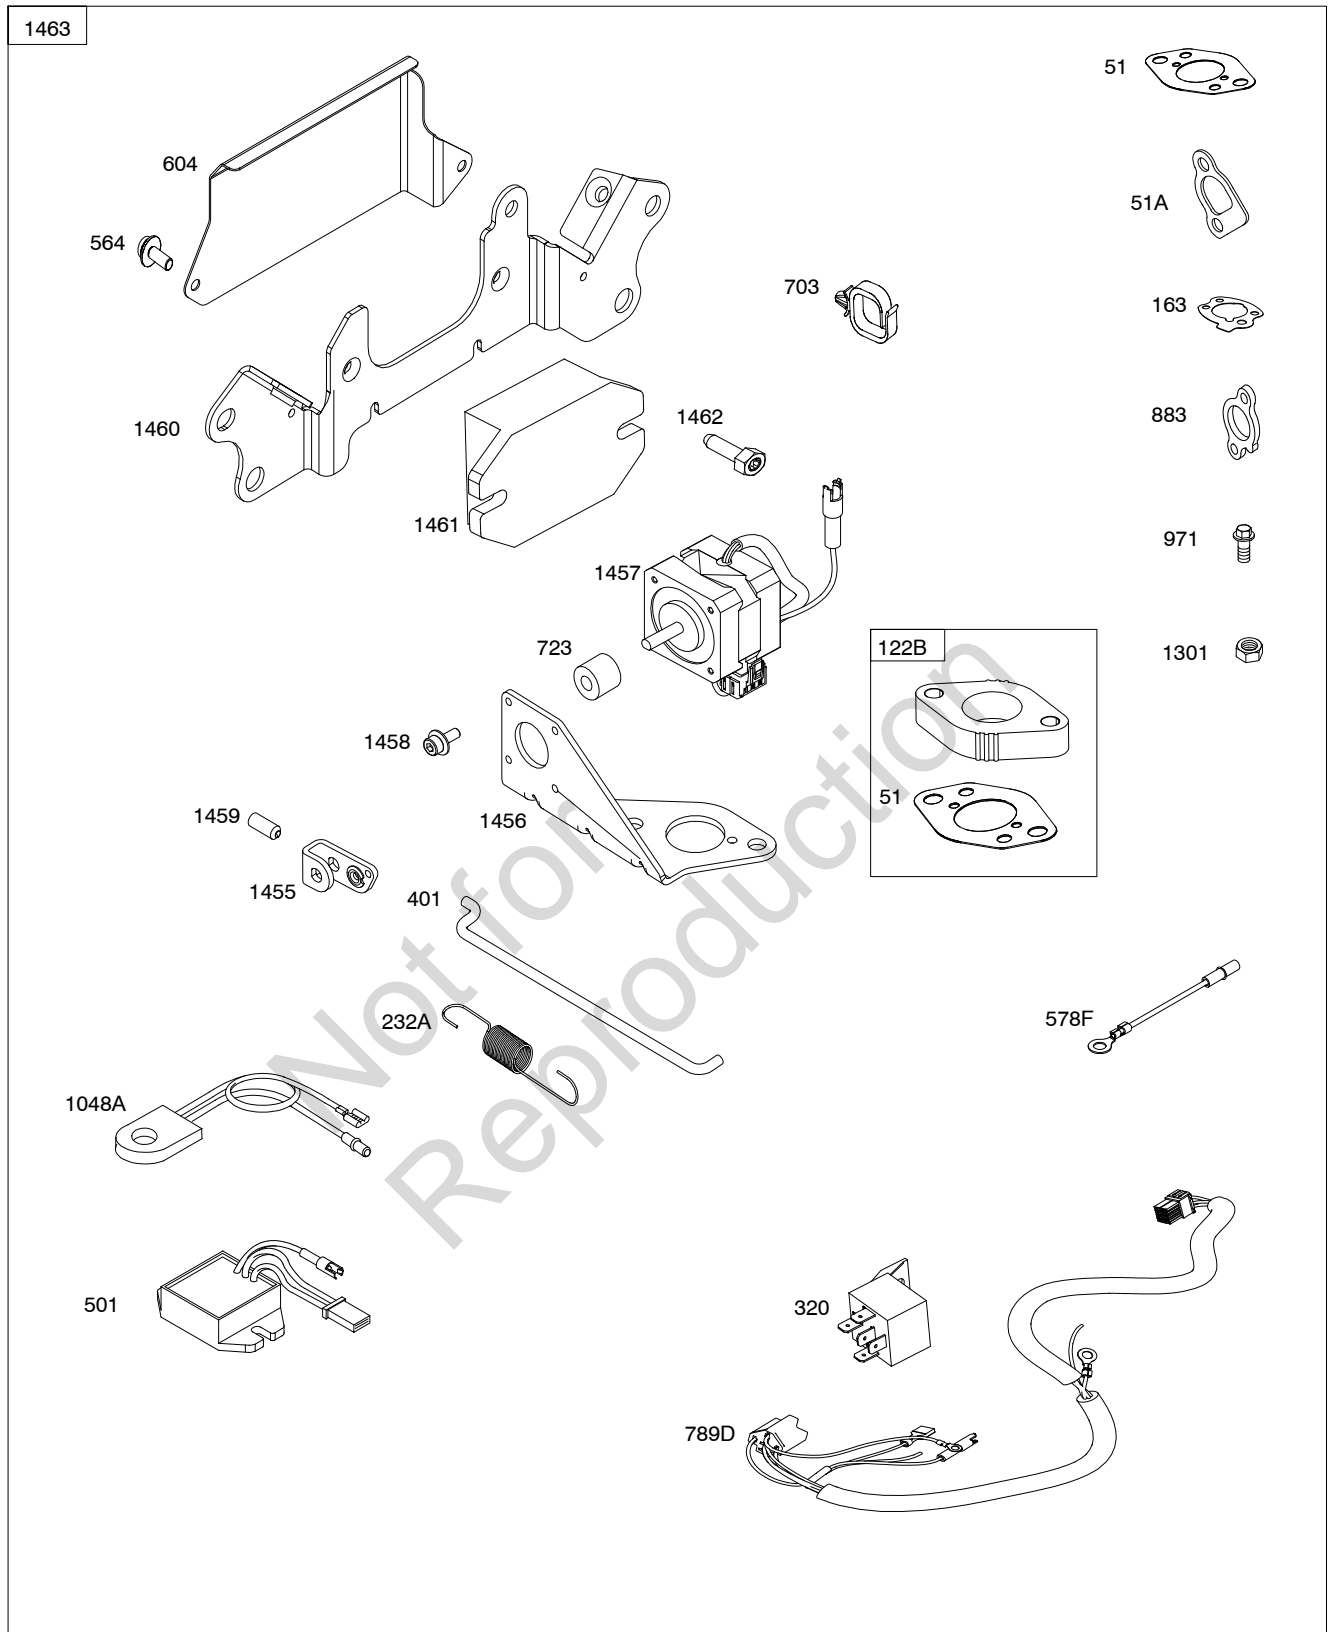

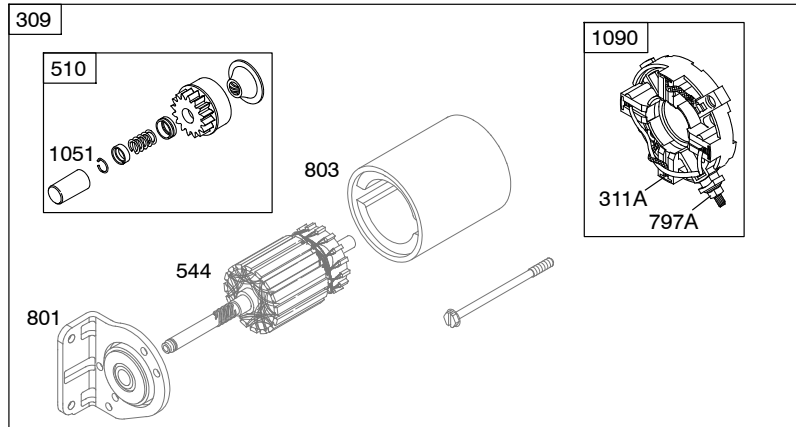

697

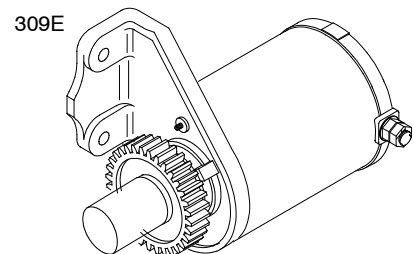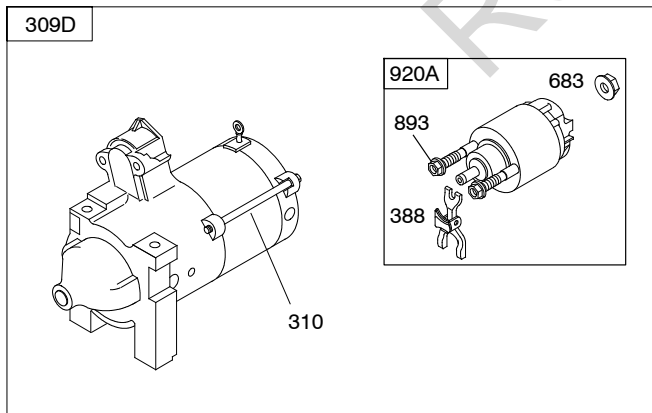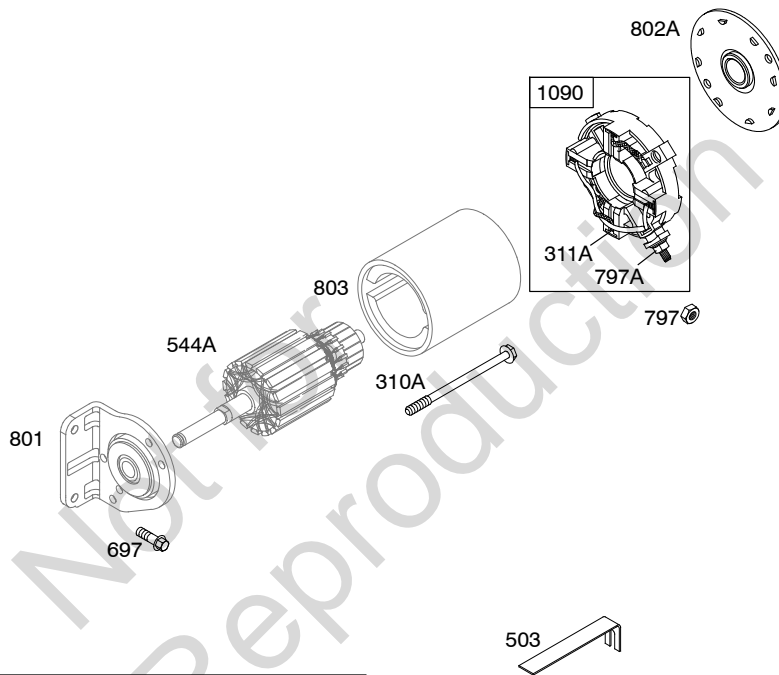   

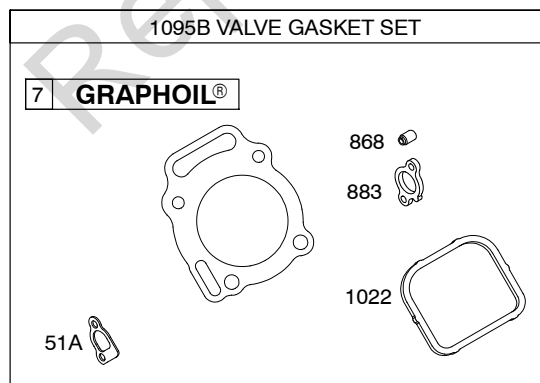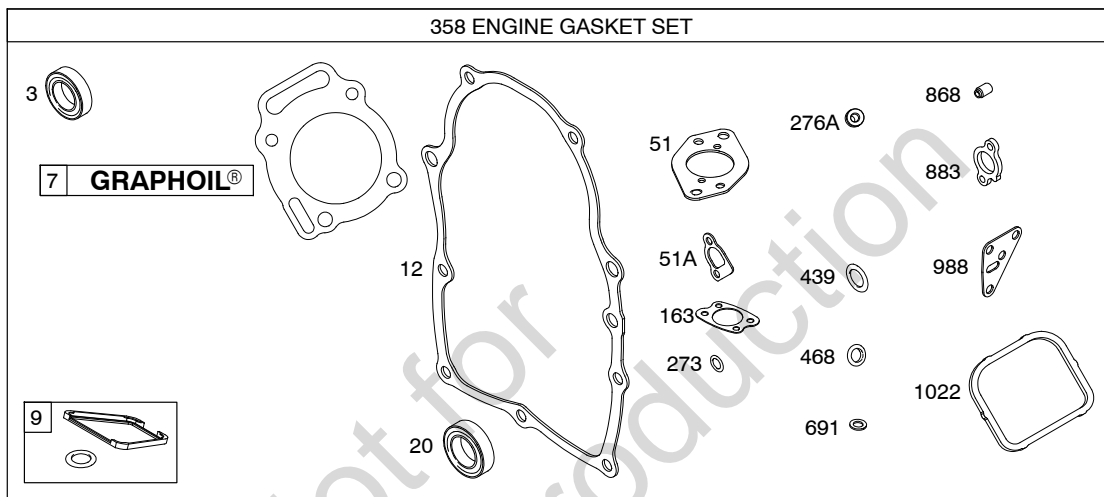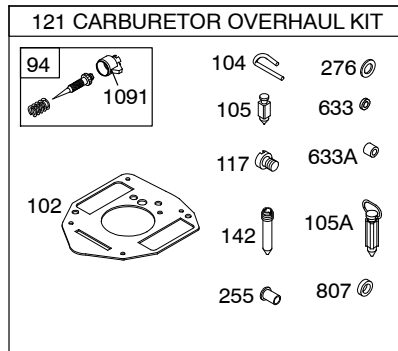   

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692178	Cylinder Assembly ----- Note ----- 841829 Cylinder Assembly Used on Type No(s). 0111. 841081 Cylinder Assembly Used on Type No(s). 0126, 0146, 0292, 0320.	15	690946	Plug-Oil Drain (External 7/16" Sq) ----- Note ----- 691680 Plug-Oil, Drain (Internal 3/8" Sq)	17	843827	Bearing-Ball (Crankcase Cover Requires Two (2) Ball Bearings) ----- Note ----- 691541 Bearing-Ball (Crankcase Cover Requires Two (2) Ball Bearings) Used on Type No(s). 0127, 0143, 0144.
2	808534	Kit-Bushing/Seal (Magneto Side)	15A	691686	Plug-Oil Drain Used on Type No(s). 0221, 0222.	18	844588	Cover-Crankcase ----- Note ----- 844724 Cover-Crankcase (Used After Code Date 07101400). Used on Type No(s). 0127, 0143, 0144, 0216, 0284, 1144, 1216.
3	805101s	Seal-Oil (Magneto Side)	16	692161	Crankshaft ----- Note ----- 692168 Crankshaft Used on Type No(s). 0178, 0203, 0264, 0265, 0285. 692163 Crankshaft Used on Type No(s). 0003, 0005, 0078, 0112, 0113, 0115, 0116, 0132, 0133, 0145, 0171, 0175, 0197, 0233, 0234, 0242, 0248, 0255, 0281, 0301, 0305, 1409, 2133, 3078.	18A	808851	Cover-Crankcase (Used Before Code Date 07101500). Used on Type No(s). 0127, 0144.
5	845715	Head-Cylinder ----- Note ----- 808688 Head-Cylinder Used on Type No(s). 0222.			808975 Crankshaft Used on Type No(s). 0119, 0218, 0252, 0328, 1410, 2218, 3052. 841827 Crankshaft Used on Type No(s). 0110, 0111. 809212 Crankshaft Used on Type No(s). 0077, 0172. 692162 Crankshaft Used on Type No(s). 0077, 0124, 0144, 0192, 0284, 1124, 1144, 3077. 692165 Crankshaft Used on Type No(s). 0169, 0194, 0195, 0196, 0204, 0325. 692169 Crankshaft Used on Type No(s). 0127, 0143, 0216, 1127, 1216. 845027 Crankshaft Used on Type No(s). 0087, 0121, 0268, 0277, 0299, 1268, 3087.	18B	844725	Cover-Crankcase Used on Type No(s). 0005, 0145, 0218, 0252, 0281, 0328, 1409, 1410, 2218, 3052.
5A	845716	Head-Cylinder ----- Note ----- 808689 Head-Cylinder Used on Type No(s). 0222.				20	805049s	Seal-Oil (PTO Side)
7	806085s	Gasket-Cylinder Head				21	809500	Cap-Oil Fill
8	808984	Breather Assembly				22	807362	Screw (Crankcase Cover/Sump)
9	844986	Gasket-Breather						
10	690751	Screw (Breather Assembly)						
10A	806421	Screw (Breather Cover)						
11	691556	Tube-Breather						
11A	806083s	Tube-Breather (Used Before Code Date 09121800).						
11B	844921	Tube-Breather (Used After Code Date 09121700).						
11C	844976	Tube-Breather Used on Type No(s). 0218, 0222, 0252, 1410.						
11D	845585	Tube-Breather Used on Type No(s). 0285, 293.						
12	842589	Gasket-Crankcase ----- Note ----- 845254 Gasket-Crankcase (Metal Core) Used on Type No(s). 0002, 0191, 0193, 0135, 0307, 1187, .						
13	692059	Screw (Cylinder Head)						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
23	841825	Flywheel ----- Note ----- 841830 Flywheel Used on Type No(s). 0111. 842514 Flywheel Used on Type No(s). 0013, 0119, 0135, 0139, 0147, 0155, 0177, 0180, 0181, 0184, 0186, 0205, 0239, 0240, 0243, 0244, 0253, 0262, 0271, 0279, 0280, 0286, 0292, 0298, 0303, 0320, 1135, 1139, 1181, 1186, 1205, 1217, 1226, 1253. 842515 Flywheel Used on Type No(s). 0142. 841657 Flywheel Used on Type No(s). 0169, 0170, 0194, 0195, 0204, 0255, 0325. 842683 Flywheel Used on Type No(s). 0218, 0222, 0252, 0328, 1409, 1410 2218, 3052.	25A	843951	Piston Assembly (Standard) (Used Before Code Date 07122400). ----- Note ----- 843958 Piston Assembly (.020" Oversize) (Used Before Code Date 07122400).	36	692084	Spring-Valve (Exhaust)		
			26	843953	Ring Set (Standard) (Used After Code Date 07122300). Ring Set (Standard) (For Replacement Rings, Order Reference 25A) (Used Before Code Date 07122400) ----- Note ----- 843957 Ring Set (.020" Oversize) (Used After Code Date 07122300). Ring Set (.020" Oversize) (For Replacement Rings, Order Reference 25A) (Used Before Code Date 07122400)	37	841309	Guard-Flywheel		
						40	692058	Retainer-Valve		
						40A	844895	Retainer-Valve		
						42	807683	Keeper-Valve		
						45	843379	Tappet-Valve ----- Note ----- 690977 Tappet-Valve Used on Type No(s). 0255.		
						46	845649	Camshaft ----- Note ----- 692157 Camshaft Used on Type No(s). 0005, 0145, 0218, 0252, 0281, 0328, 1409, 1410, 2218, 3052. 842064 Camshaft Used on Type No(s). 0255.		
						50	690754	Manifold-Intake ----- Note ----- 692124 Manifold- Intake Used on Type No(s). 1409.		
						50A	844034	Manifold-Intake Used on Type No(s). 0075, 0077, 0078, 0079, 0087, 0217, 0230, 0231, 0240, 0243, 0246, 0252, 0264, 0265, 0268, 0276, 0277, 0285, 0287, 0289, 0292, 0293, 0320, 1217, 1268, 3052, 3075, 3077, 3078, 3079, 3087.		
23A	841908	Flywheel Used on Type No(s). 0027, 0112, 0113, 0114, 0120, 0121, 0123, 0127, 0156, 0183, 0187, 0197, 0207, 0220, 0234, 0235, 0266, 0267, 0274, 0277, 0278, 0299, 0300, 0307, 0315, 0318, 0327, 0527, 1127, 1187, 1266.	27	690683	Lock-Piston Pin			51	691694	Gasket-Intake
			28	844541	Pin-Piston (Standard) (Used After Code Date 07122300). ----- Note ----- 807621 Pin-Piston (Standard) (Used Before Code Date 07122400).			51A	692035	Gasket-Intake
								54	690676	Screw (Intake Manifold) (M8x63mm)
			29	807900s	Rod-Connecting					
			32	690698	Screw (Connecting Rod)					
			33	807681	Valve-Exhaust ----- Note ----- 808687 Valve-Exhaust Used on Type No(s). 0222.					
25	843952	Piston Assembly (Standard) (Used After Code Date 07122300). ----- Note ----- 843956 Piston Assembly (.020" Oversize) (Used After Code Date 07122300).	34	807680	Valve-Intake					
			34A	843751	Valve-Intake					
			35	692084	Spring-Valve (Intake)					

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691568	Housing-Rewind Starter	77	690819	Motor-Servo (Motor-Servo Is No Longer Available)(See Reference 1463 For Replacement Kit). Used on Type No(s). 0005, 0145, 0281.	94	844987	Kit-Idle Mixture ----- Note -----
56	692085	Pulley-Starter						842870 Kit-Idle Mixture
57	692086	Spring-Rewind Starter						Used on Type No(s). 0079, 0100, 0110, 0111, 0119, 0142, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0178, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0264, 0265, 0269, 0270, 1409, 1410.
58	66574	Rope-Starter	78	690688	Screw (Flywheel Guard)			
59	805957	Insert-Grip	86	690745	Deflector-Oil	95	690718	Screw (Throttle Valve)
60	808167	Grip-Starter Rope	91	809208	Body-Upper Carburetor ----- Note -----	97	809007	Shaft-Throttle
65	690341	Screw (Rewind Starter) (5/16-18, x 0.875)				97A	809095	Shaft-Throttle Used on Type No(s). 0218, 0252, 0328, 1409, 1410, 2218, 3052.
65A	841233	Screw (Rewind Starter) (M6 x 10mm)				97B	807495	Shaft-Throttle Used on Type No(s). 0178, 0264, 0285, 0293.
73	841662	Screen-Rotating			807919 Body-Upper Carburetor Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270.			
73A	841440	Screen-Rotating						
73B	841582	Screen-Rotating Used on Type No(s). 0150, 0154, 0178, 0193-E1, 0217, 0221, 0264, 0270, 0285, 0323, 0325, 1217.						
73C	494439	Screen-Rotating						
74	841441	Screw (Rotating Screen)			842236 Body-Upper Carburetor Used on Type No(s). 0119.			
74A	691647	Screw (Rotating Screen)			843532 Body-Upper Carburetor Used on Type No(s). 1409.			
75	691490	Washer (Flywheel)			842835 Body-Upper Carburetor Used on Type No(s). 0142, 1410.			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
98	808177	Kit-Idle Speed	109	808398	Shaft-Choke	117	690881	Jet-Main (Standard)
98A	808981	Kit-Idle Speed	109B	809096	Shaft-Choke			----- Note -----
102	692077	Gasket-Carburetor Body			----- Note -----			----- Note -----
104	690723	Pin-Float Hinge			808962 Shaft-Choke Used on Type No(s). 1409.			690862 Jet-Main (Standard) (Used Before Code Date 10010100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270.
105	797410	Valve-Float Needle	110	806861	Washer (Choke Shaft)			690862 Jet-Main (Standard) Used on Type No(s). 0178, 0264, 0285, 0293.
		----- Note -----						842238 Jet-Main (Standard) Used on Type No(s). 0119.
		805620 Valve-Float Needle						842318 Jet-Main (Standard) (Used After Code Date 06092900). Used on Type No(s). 1409.
		Used on Type No(s). 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0255, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0523, 0527, 0568, 1124, 1127, 1216, 1266.						806859 Jet-Main (Standard) (Used Before Code Date 06093000). Used on Type No(s). 1409.
105A	808798	Kit-Needle/Seat						842314 Jet-Main (Standard) Used on Type No(s). 0110, 0111.
108A	844989	Valve-Choke						842782 Jet-Main (Standard) Used on Type No(s). 0142, 1410.
		----- Note -----						
		690719 Valve-Choke (Used Before Code Date 10010100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270.						
		690719 Valve-Choke Used on Type No(s). 0110, 0111, 0119, 0142, 0178, 0264, 1409, 1410.						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
118	844990	<p>Jet-Main (High Altitude) (Over 5000 Feet)</p> <p>842311 Jet-Main (High Altitude) (Over 5000 Feet) Used on Type No(s). 0264.</p> <p>----- Note -----</p> <p>842311 Jet-Main (High Altitude) (Over 5000 Feet) (Used Before Code Date 09121700). Used on Type No(s). 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0254, 0255, 0266, 0267, 1216.</p> <p>842311 Jet-Main (High Altitude) (Over 5000 Feet) (Used Before Code Date 10012000). Used on Type No(s). 0239, 0257.</p>							<p>----- Note -----</p> <p>842837 Jet-Main (High Altitude) (Over 5000 Feet) Used on Type No(s). 0110, 0111.</p> <p>842314 Jet-Main (High Altitude) (5000 Ft.) Used on Type No(s). 0142, 1410.</p> <p>842841 Jet-Main (High Altitude) (Over 5000 Feet) Used on Type No(s). 0119.</p> <p>842318 Jet-Main (High Altitude) (6500 Ft.) Used on Type No(s). 0119.</p>	
					<p>842311 Jet-Main (High Altitude) (Over 5000 Feet) (Used Before Code Date 10010100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270.</p> <p>842311 Jet-Main (High Altitude) (Over 5000 Feet) (Used Before Code Date 05101200). Used on Type No(s). 0178-E1.</p> <p>----- Note -----</p> <p>807012 Jet-Main (High Altitude) (Over 5000 Feet) Used on Type No(s). 0285, 0293.</p> <p>807012 Jet-Main (High Altitude) (Over 5000 Feet) (Used Before Code Date 10120100). Used on Type No(s). 0218, 0252, 1410.</p> <p>----- Note -----</p> <p>807114 Jet-Main (High Altitude) (Over 5000 Ft.) (Used Before Code Date 06100100). Used on Type No(s). 1409.</p> <p>842836 Jet-Main (High Altitude) (Over 5000 Ft.) (Used After Code Date 06093000). Used on Type No(s). 1409.</p>					

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118A	809442	Jet-Main (High Altitude) (9000 Feet) ----- Note ----- 807011 Jet-Main (High Altitude) (9000 Feet) (Used Before Code Date 10120100). Used on Type No(s). 0218, 0252, 1410. ----- Note ----- 842311 Jet-Main (High Altitude) (9000 Feet) (Used Before Code Date 06100100). Used on Type No(s). 1409. 842839 Jet-Main (High Altitude) (9,000 Feet) (Used After Code Date 06093000). Used on Type No(s). 1409. ----- Note ----- 842840 Jet-Main (High Altitude) (10,000 Feet) Used on Type No(s). 0110, 0111. 842783 Jet-Main (High Altitude) (9,000 Feet) Used on Type No(s). 0142, 1410. 842842 Jet-Main (High Altitude) (10,000 Feet) Used on Type No(s). 0119.	119	690720	Screw (Upper To Lower Carburetor Body) (M4x18mm) ----- Note ----- 842761 Screw (Upper To Lower Carburetor Body) (M4x16mm) Used on Type No(s). 0110, 0111, 0119, 0142, 1409, 1410.	121	809021	Kit-Carburetor Overhaul
						122	690691	Spacer-Carburetor
						122B	845817	Spacer-Carburetor
						125	844992	Carburetor (Used After Code Date 09121600). Used on Type No(s). 0002, 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0190, 0194, 0196, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0254, 0255. 0266, 0267, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0327, 0523, 0527, 0568, 1124, 1127, 1216, 1266. ----- Note ----- 845906 Carburetor (Conversion Kit) (Used Before Code Date 09121700). Used on Type No(s). 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0254, 0255, 0266, 0267, 1216.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	844988	Carburetor Used on Type No(s). 0003, 0005, 0006, 0007, 0075, 0077, 0078, 0087, 0112, 0116, 0117, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0155, 0157, 0169, 0170, 0171, 0175, 0181, 0186, 0187, 0191, 0192, 0193, 0195, 0196, 0204, 0206, 0208, 0222, 0242, 0243, 0244, 0248, 0261, 0262, 0268, 0284, 0286, 0289, 0298, 0301, 0303, 0305, 0310, 0321, 0322, 1135, 1139, 1144, 1181, 1186, 1187, 1244, 1261, 1268, 2133, 2206, 3075, 3077, 3078, 3087.	125B	845084	Carburetor (Used After Code Date 10011900). Used on Type No(s). 0001, 0239, 0257, 0271, 0290. ----- Note ----- 845937 Carburetor (Conversion Kit) (Used Before Code Date 10012000). Used on Type No(s). 0239, 0257. ----- Note ----- 844991 Carburetor (Used After Code Date 09123100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0269, 0270, 0281, 0287, 0291, 0292, 0320, 0323, 1205, 1217, 1226, 1253, 1263, 1269, 2209, 3079.	125D	843129	Carburetor (Used After Code Date 06093000). Used on Type No(s). 1409. ----- Note ----- 809152 Carburetor (Used Before Code Date 06100100). Used on Type No(s). 1409.
125A	844993	Carburetor (Used After Code Date 10113000) Used on Type No(s). 0218, 0252, 0328, 2218, 3052. ----- Note ----- 845772 Carburetor (Conversion Kit) (Used Before Code Date 10120100). Used on Type No(s). 0218, 0252, 1410.	125C	809011	Carburetor (Used Before Code Date 10010100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270. ----- Note ----- 809011 Carburetor (Used Before Code Date 05101200). Used on Type No(s). 0178-E1	125E	842729	Carburetor Used on Type No(s). 0178, 0264.
						125F	845255	Carburetor Used on Type No(s). 0285, 0293.
						125G	842235	Carburetor Used on Type No(s). 0119. ----- Note ----- 842736 Carburetor Used on Type No(s). 0142, 1410.
						125H	841834	Carburetor Used on Type No(s). 0110, 0111.
						130	690726	Valve-Throttle
						133A	844546	Float-Carburetor ----- Note ----- 806961 Float -Carburetor Used on Type No(s). 0110, 0111, 0119, 0142, 0178, 0264, 0285, 0293, 1409, 1410.
						133B	843320	Float-Carburetor (Used After Code Date 10010100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
142	690725	Nozzle-Carburetor (Standard) ----- Note ----- 842240 Nozzle-Carburetor (Standard) Used on Type No(s). 0119, 0142, 1410. 842319 Nozzle-Carburetor (Standard) (Used After Code Date 06093000). Used on Type No(s). 1409. 806860 Nozzle-Carburetor (Standard) (Used Before Code Date 06100100). Used on Type No(s). 1409. 806987 Nozzle-Carburetor (Standard) Used on Type No(s). 0110, 0111.	161A	845088	Base-Air Cleaner (Metal) Used on Type No(s). 0001, 0007, 0023, 0027, 0068, 0113 , 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0255, 0257, 0266, 0267, 0271, 0272, 0276, 0279, 0274, 0277, 0278, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0327, 0527, 0568, 1124, 1127, 1216, 1266.	161D	844929	Base-Air Cleaner Used on Type No(s). 0004, 0005, 0007, 0075, 0077, 0078, 0079, 0087, 0100, 0116, 0117, 0112, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0152, 0153, 0155, 0157, 0168, 0169, 0173, 0175, 0181, 0184, 0186, 0187, 0191, 0192, 0193, 0194, 0195, 0196, 0204, 0205, 0206, 0208, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0240, 0242, 0243, 0244, 0246, 0248, 0253, 0255, 0261, 0263, 0268, 0269, 0270, 0281, 0284, 0286, 0287, 0289, 0291, 0298, 0301, 0305, 0310, 0321, 0322, 0232, 1135, 1139, 1144, 1181, 1186, 1205, 1217, 1226, 1244, 1253, 1261, 1268, 1269, 2206, 3087. ----- Note ----- 845142 Base-Air Cleaner Used on Type No(s). 0013, 0242, 0262, 0303, 0322, 0328, 1187, 1263, 1268, 2133, 2206, 2209, 3075, 3077, 3078, 3087.
151	841185	Stud (Exhaust Manifold)	161B	808414	Base-Air Cleaner (Metal)			
161	691561	Base-Air Cleaner (Metal) ----- Note ----- 842830 Base-Air Cleaner (Metal) Used on Type No(s). 0150, 0151, 0154, 0165, 0187, 0189, 1410.	161C	841824	Base-Air Cleaner (Metal)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
161E	844994	Base-Air Cleaner Used on Type No(s). 0150, 0151, 0154, 0165, 0189, 0218, 0230, 0231, 0252, 0292, 0320, 1410. ----- Note ----- 845600 Base-Air Cleaner Used on Type No(s). 2218.	163	692081	Gasket-Air Cleaner	182E	841601	Bracket-Fuel Tank			
			163B	841823	Gasket-Air Cleaner	182F	691520	Bracket-Fuel Tank			
			163C	844931	Gasket-Air Cleaner Used on Type No(s). 0001, 0004, 0005, 0007, 0013, 0075, 0077, 0078, 0079, 0087, 0100, 0113, 0114, 0115, 0116, 0117, 0118, 0112, 0113, 0114, 0126, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0150, 0151, 0152, 0153, 0154, 0155, 0157, 0165, 0168, 0169, 0172-H1, 0173, 0175, 0181, 0184, 0186, 0187, 0189, 0191, 0192, 0193, 0194, 0195, 0196, 0204, 0205, 0206, 0208, 0209, 0217, 0218, 0221, 0222, 0223, 0226, 0230, 0231, 0233-H1, 0234, 0235, 0240, 0242, 0243, 0244, 0246, 0248, 0253, 0255, 0261, 0262, 0263, 0268, 0269, 0270, 0271, 0280, 0281, 0283, 0284, 0285, 0286, 0287, 0288, 0289, 0290, 0291, 0292, 0298, 0293, 0300, 0301, 0305, 0310, 0315, 0316, 0320, 0321, 0322, 0323, 0327, 0328, 1135, 1139, 1144, 1181, 1186, 1187, 1205, 1216, 1217, 1226, 1244, 1263, 1410, 1253, 1261, 1268, 1269, 2218, 2133, 2206, 2209, 3075, 3077, 3078, 3087.	182G	841600	Bracket-Fuel Tank	182H	691524	Bracket-Fuel Tank
161F	844996	Base-Air Cleaner Used on Type No(s). 0222.				182J	691525	Bracket-Fuel Tank			
						186	844032	Connector-Hose			
						186A	845121	Connector-Hose			
						186B	845141	Connector-Hose			
						187	791766	Line-Fuel (15" Long) (Cut To Length) ----- Note ----- 791745 Line-Fuel (23" Long) (Cut To Length)			
						187A	791744	Line-Fuel (Formed) (14" Long) (Cut To Length) ----- Note ----- 791801 Line-Fuel (Formed) (7.33" Long) (Cut To Length)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187B	692107	Line-Fuel	188	692056	Screw (M8x14mm) (Control Bracket)	209	692070	Spring-Governor ----- Note -----
187C	692106	Line-Fuel	190	692056	Screw (Fuel Tank)	690710		Spring-Governor Used on Type No(s). 0150, 0239, 0240, 0271.
187E	844556	Line-Fuel Used on Type No(s). 0001, 0002, 0013, 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0172, 0174, 0177, 0180, 0183, 0190, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0257, 0266, 0267, 0270, 0271, 0272, 0276, 0279, 0274, 0277, 0278, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0327, 0523, 0527, 0568, 1124, 1127, 1216, 1266.	190A	692199	Screw (Fuel Tank)	690716		Spring-Governor Used on Type No(s). 0007, 0119, 0135, 0142, 0156, 0244, 0286, 0322, 1135, 1244.
			192	807623	Adjuster-Rocker Arm	691506		Spring-Governor Used on Type No(s). 0003, 0078, 0132, 0133, 0301, 2133, 3078.
			197	807163	Screw (Back Plate)	691507		Spring-Governor Used on Type No(s). 0110, 0111, 0130, 0157, 0172, 0193, 0207, 0274, 1226, 2206.
			203	690923	Crank-Bell	691508		Spring-Governor Used on Type No(s). 0152, 0170, 0194, 0195, 0196, 0203, 0221, 0270, 0323, 0325.
			203A	808753	Crank-Bell Used on Type No(s). 0222..	691546		Spring-Governor Used on Type No(s). 0242.
			205	692083	Screw (Bell Crank)	692071		Spring-Governor Used on Type No(s). 0138, 0178, 0209, 0230, 0231, 0236, 0246, 0264, 0285, 0287, 0289, 0292, 0320, 0321, 2209.
			206	691244	Nut-Governor Adjusting	692072		Spring-Governor Used on Type No(s). 0154, 0165, 0222.
			208	808453	Rod-Governor Control	805630		Spring-Governor Used on Type No(s). 0255.
			208A	844796	Rod-Governor Control Used on Type No(s). 0242.			
187F	844560	Line-Fuel Used on Type No(s). 0001, 0002, 0113, 0114, 0115, 0118, 0121, 0156, 0197, 0207, 0220, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0523, 0527, 0568, 1124, 1127, 1266.						
187G	844557	Line-Fuel Used on Type No(s). 0023, 0027, 0068, 0120, 0123, 0124, 0126, 0127, 0143, 0172, 0174, 0177, 0180, 0183, 0190, 0213, 0216, 0228, 0233, 0234, 0235, 0239, 0254, 0327, 1216.						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		806507 Spring-Governor Used on Type No(s). 0130, 0206, 0226.	215	841183	Cover-Cylinder Head (Cylinder 1) ----- Note ----- 841316 Cover-Cylinder Head (Cylinder 2) Used on Type No(s). 0175, 0178, 0193, 0203, 0217, 0236, 0248, 0265, 0281, 0285, 1217.	232	692073	Spring-Governor Link
209A	690709	Spring-Governor Used on Type No(s). 0004, 0112, 0113, 0115, 0116, 0171, 0175, 0197, 0233, 0234, 0248.				232A	845816	Spring-Governor Link
210	691370	Strainer-Fuel				234	691723	Clip-Control Rod
210A	845270	Strainer-Fuel Used on Type No(s). 0001, 0194, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0523, 0527, 0568, 1124, 1127, 1266.	215A	841182	Cover-Cylinder Head (Cylinder 2) ----- Note ----- 841317 Cover-Cylinder Head (Cylinder 1) Used on Type No(s). 0175, 0178, 0193, 0203, 0217, 0236, 0248, 0265, 0281, 0285, 1217.	239	690233	Switch-Oil Pressure ----- Note ----- 697049 Switch-Oil Pressure Used on Type No(s). 0142, 0239, 0140, 0271.
		691505 Spring-Governed Idle Used on Type No(s). 0110, 0111, 0119, 0130, 0135, 0157, 0206, 0207, 0226, 0244, 0274, 0286, 0318, 1135, 1226, 1244, 2206.	216	690705	Link-Choke	240	691035	Filter-Fuel
211	692069	Spring-Governed Idle ----- Note ----- 691553 Spring-Governed Idle Used on Type No(s). 0142, 0155, 0246, 0287.	217	806862	Spring-Choke Return	240A	808116s	Filter-Fuel ----- Note ----- 844545 Filter-Fuel Used on Type No(s). 0001, 0002, 0023, 0027, 0068, 0113, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0172, 0174, 0177, 0180, 0183, 0190, 0197, 0207, 0213, 0216, 0218, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0327, 0523, 0527, 0568, 1124, 1127, 1216, 1266.
		692068 Spring-Governed Idle Used on Type No(s). 0003, 0078, 0132, 0133, 0255, 0265, 0301, 2133, 3078.	222	845305	Bracket-Control			
211A	690707	Spring-Governed Idle Used on Type No(s). 0004, 0112, 0113, 0115, 0116, 0117, 0171, 0175, 0197, 0234, 0248. ----- Note ----- 692068 Spring-Governed Idle Used on Type No(s). 0003, 0078, 0132, 0133, 0255, 0265, 0301, 2133, 3078.	222A	844169	Bracket-Control Used on Type No(s). 0007, 0110, 0111, 0119, 0142, 0322.	240B	845125	Filter-Fuel Used on Type No(s). 0169, 0170, 0194, 0195, 0196, 0204, 0325, 0328.
		690712 Link-Throttle	226	692075	Rod-Hand Choke			
212	690712	Link-Throttle	227	690236	Lever-Governor Control	255	690721	Bushing-Choke Shaft
212A	691519	Link-Throttle Used on Type No(s). 0005, 0145, 0281.	227A	845484	Lever-Governor Control Used on Type No(s). 0003, 0078, 0112, 0113, 0115, 0116, 0132, 0133, 0171, 0175, 0197, 0233, 0234, 0248, 0255, 0301, 2133, 3078.	262	692083	Screw (Rod Bracket)
			227B	844799	Lever-Governor Control Used on Type No(s). 0242.			
			231	690718	Screw (Choke Valve)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
265	691024	Clamp-Casing	300A	692099	Muffler	309	691564	Motor-Starter
267	841552	Screw (Casing Clamp) (M5X20mm)			Used on Type No(s). 0068, 0121, 0123, 0124, 0127, 0132, 0133, 0135, 0139, 0143, 0144, 0145, 0156, 0168, 0172, 0173, 0174, 0195, 0196, 0208, 0213, 0216, 0220, 0223, 0228, 0242, 0244, 0248, 0253, 0254, 0266, 0267, 0276, 0277, 0283, 0284, 0286, 0288, 0291, 0299, 0301, 0305, 0327, 0568, 1124, 1127, 1135, 1144, 1216, 1244, 1253, 1266, 2133.	309D	808817	Motor-Starter Used on Type No(s). 0111, 0126, 0146, 0320.
267A	692083	Screw				309E	844717	Motor-Starter Used on Type No(s). 0001, 0005, 0007, 0023, 0068, 0075, 0077, 0078, 0079, 0087, 0100, 0115, 0116, 0117, 0118, 0124, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0147, 0150, 0151, 0152, 0153, 0154, 0155, 0157, 0165, 0168, 0172, 0175, 0177, 0180, 0181, 0184, 0186, 0189, 0191, 0192, 0193, 0205, 0206, 0208, 0209, 0213, 0216, 0217, 0221, 0222, 0223, 0226, 0228, 0233, 0236, 0239, 0240, 0242, 0243, 0244, 0248, 0253, 0255, 0262, 0263, 0268, 0269, 0270, 0271, 0272, 0276, 0279, 0280, 0281, 0283, 0284, 0286, 0288, 0289, 0290, 0291, 0294, 0298, 0301, 0305, 0308, 0310, 0311, 0317, 0218, 0322, 0568, 1124, 1135, 1139, 1144, 1181, 1186, 1205, 1216, 1217, 1226, 1244, 1253, 1261, 1268, 1269, 2133, 2206, 2209, 3075, 3077, 3078, 3087.
268	691025	Casing-Control Wire (Cut To Required Length)	300B	690906	Muffler Used on Type No(s). 0147, 0152, 0154, 0165, 0168, 0184, 0189, 0190, 0197, 0206, 0240, 0243, 0270, 0294, 0303, 0308, 0310, 0323, 2206.			
269	691026	Wire-Control (Cut To Required Length)						
270	691027	Nut (Control Wire Casing)						
271	692541	Lever-Control (Cable Wire With "Z" Formed End)						
273	690681	Seal-O Ring (Oil Pump)						
276	690724	Washer-Sealing						
276A	807085	Washer-Sealing (Head)(Rocker Cover)						
276B	806137	Washer-Sealing (Solenoid)						
276C	690704	Washer-Sealing (Crankcase Cover/Sump)						
276D	691766	Washer-Sealing (Head)(Rocker Cover)						
276F	693497	Washer-Sealing Used on Type No(s). 0110, 0111, 0119, 0142, 1409, 1410.						
278	842122	Washer (Governor Control Lever)						
280	691526	Bracket-Rod	300C	691562	Muffler Used on Type No(s). 0001, 0194, 0207, 0218, 0239, 0252, 0257, 0263, 0269, 0271, 0274, 0290, 0300, 0318, 0325, 0328, 1269, 1410, 2218, 3052.			
281	690742	Panel-Control						
282	692083	Screw (Control Lever)						
287	692062	Screw (Dipstick Tube)						
287A	806660	Screw (Dipstick Tube) (M8x18mm)						
290	809911	Screw (Adapter-Air Cleaner) (M6x55mm) Used on Type No(s). 0293.	300D	808379	Muffler Used on Type No(s). 0194, 0257, 0300, 1410.			
300	498984s	Muffler Used on Type No(s). 0150, 0151, 0221.	304	842681	Housing-Blower			
			305	692062	Screw (Blower Housing)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
310		Screw (Starter Motor) (For Replacement Starter Motor, Order Reference 309) ----- Note ----- 820807 Screw (Starter Motor) Used on Type No(s). 0111, 0126, 0146.	337	491055s	Plug-Spark ----- Note ----- 496018s Plug-Spark Used on Type No(s). 0007, 0119, 0142, 0178, 0203, 0218, 0221, 0252, 0264, 0265, 0285, 0293, 0322, 0328, 2218, 3052.	356	690796	Wire-Stop
310A	690323	Screw (Starter Motor)			792015 Plug-Spark Used on Type No(s). 0004, 0005, 0013, 0027, 0068, 0075, 0077, 0078, 0079, 0087, 0110, 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0146, 0150, 0151-B1, 0152, 0153, 0154, 0158, 0165, 0169, 0170, 0172, 0174, 0175, 0190, 0192, 0193, 0194, 0195, 0196, 0197, 0204, 0207, 0208, 0209, 0213, 0222, 0223, 0228, 0230, 0233, 0234, 0235, 0248, 0254, 0255, 0261, 0262, 0263, 0266, 0267, 0268, 0269, 0270, 0274, 0276, 0277, 0281, 0283, 0288, 0291, 0292, 0298, 0308, 0310, 0315, 0316, 0317, 0318, 0320, 0325, 0327, 0323, 0527, 0568, 1124, 1261, 1263, 1266, 1268, 1269, 1409, 1410, 2209, 3075, 3077, 3078, 3079, 3087.	357	691483	Key-Drive Pulley
311A	497608	Brush Set				358	841188	Gasket Set-Engine
318	807130	Screw (Mounting Bracket)				359	691077	Washer (Ignition Module)
318B	690932	Screw (Mounting Bracket) Used on Type No(s). 0005, 0145, 0281.				363	19203	Puller-Flywheel
320	1726829SM	Relay (Single Pole, Double Throw)				365	690711	Screw (Carburetor) (M8 x 38mm)
322	692067	Screw (Cylinder Head Cover)				365A	690866	Screw (Carburetor) (M6 x 98mm)
332	690887	Nut (Flywheel)				373	691612	Nut (Ground Terminal)
333	844548	Armature-Magneto				377	808095	Key-Woodruff
334	692066	Screw (Magneto Armature)				377A	691639	Key-Timing
						383	19576s	Wrench-Spark Plug
						385	807084	Screw (Fuel Pump)
						387	808656	Pump-Fuel
						387A	845148	Pump-Fuel Used on Type No(s). 0178, 0203, 0264, 0265, 0271, 0285, 0293.
						388	820799	Lever-Pinion Drive (Used Before Code Date 10050800). ----- Note ----- Level-Pinion Drive (See Ref 309D For Correct Replacement Starter-Motor) (Used After Code Date 10050700).
						401	845814	Link-Actuator
						402	690679	Screw (Oil Filter Cover)
						415	794903	Plug
						432	691509	Cap-Spring
						436	692061	Manifold-Exhaust
						436A	691499	Manifold-Exhaust
						436B	691501	Manifold-Exhaust
						436C	691502	Manifold-Exhaust
						437	691902	Screw (Exhaust Manifold) (M8 x 20mm)
			346	690661	Screw (Spark Arrestor)	439	692154	Seal-O Ring (Crankcase Cover/Sump)
			347	691995	Switch-Rocker			
			349	690238	Nut (Cylinder Head Cover)			
			355	690944	Washer (Muffler Bracket)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
445	394018s	Filter-Air Cleaner Cartridge	474A	696458	Alternator (16 Amp Regulated)	503	691532	Strap-Starter (82mm Long)
445A	393957s	Filter-Air Cleaner Cartridge	474B	696579	Alternator (20 Amp)			----- Note -----
		----- Note -----			Used on Type No(s).			845016 Strap-Starter (60mm Long)
		845090 Filter-Air Cleaner Cartridge			0013, 0119, 0135,	505	690238	Nut
		Used on Type No(s).			0139,0147, 0155,			(Governor Control Lever)
		0001, 0007, 0023,			0177, 0180, 0181,	506	807120	Screw
		0027, 0068, 0113,			0184, 0186, 0194,			(M4x18mm)
		0114, 0115, 0118,			0205, 0239, 0240,			(Carburetor Cover)
		0120, 0121, 0123,			0243, 0244, 0253,	507	691972	Insulator
		0124, 0126, 0127,			0262, 0271, 0279,	510	496881	Drive-Starter
		0156, 0172, 0177,			0280, 0286, 0292,	515	691528	Spring-Pawl
		0180, 0183, 0194,			0298, 0320, 1135,	520	691084	Terminal-Ground
		0197, 0207, 0213,			1139, 1181, 1186,	523	693175	Dipstick
		0216, 0220, 0228,	474C	841833	Alternator	523A	692100	Dipstick
		0233, 0234, 0235,			----- Note -----			Used on Type No(s).
		0239, 0240, 0243,			841178 Alternator			0217, 0236, 1217.
		0244, 0246, 0254,			(20-50 Amp)	524	693172	Seal-Dipstick Tube
		0257, 0266, 0267,			Used on Type No(s).	524A	281370s	Seal-Dipstick Tube
		0271,0272, 0274,			0142.			Used on Type No(s).
		0276, 0277, 0278,	479	807084	Screw			0217, 0236, 1217.
		0279, 0280, 0283,			(Oil Pump Screen)	525	693174	Tube-Dipstick
		0288, 0290, 0294,	480	806660	Screw	525A	693173	Tube-Dipstick
		0299, 0300, 0307,			(Hose-Purge Line)			Used on Type No(s).
		0308, 0311, 0315,			(M8x18mm)			0110, 0230, 0231,
		0316, 0317, 0318,	493	691518	Bracket-Mounting			0236, 0281, 0292,
		0325, 0327, 0527,			Used on Type No(s).			0320, 1409.
		0568, 1124, 1127,			0005, 0145, 0281.	525B	690897	Tube-Dipstick
		1216, 1266.	493A	845729	Bracket-Mounting			Used on Type No(s).
447	841233	Screw	500	691086	Washer			0217, 0236, 1217.
		(Air Guide Cover)			(Key Switch)	526	692067	Screw
454	693289	Cap-Breather	501	845907	Regulator			(Regulator)
		Used on Type No(s).	501A	691573	Regulator	526A	691547	Screw
		0222.			Used on Type No(s).			(Regulator)
455	841794	Cup-Flywheel			0013, 0119, 0135,			Used on Type No(s).
456	691529	Plate-Pawl Friction			0139, 0147, 0155,			0013, 0119, 0135,
456A	845219	Plate-Pawl Friction			0177, 0180, 0181,			0139, 0142, 0147,
459	845218	Pawl-Ratchet			0184, 0186, 0205,			0155, 0177, 0180,
460	806667	Connector-Filter Adapter			0239, 0240, 0243,			0181, 0184, 0186,
					0244, 0253, 0262,			0205, 0239, 0240,
466	806466	Seal-O Ring			0271, 0279, 0280,			0243, 0244, 0253,
		(Breather Assembly)			0286, 0298, 0303,			0262, 0271, 0279,
467	844618	Knob-Air Cleaner			1135, 1139, 1181,			0280, 0286, 0298,
		(Used After Code Date			1186, 1205, 1244,			0303, 1135, 1139,
		1003310).			1253.			1181, 1186, 1205,
		----- Note -----	501B	493219	Regulator			1244, 1253.
		691985 Knob-			Used on Type No(s).			
		Air Cleaner			0117, 0118, 0316.			
		(Used Before Code	501C	841170	Regulator			
		Date 10040100).			Used on Type No(s).			
467B	691668	Seal-Air Cleaner Nut			0142.			
468	690690	Seal-O Ring						
		(Oil Pump Screen)						
474	696459	Alternator						
		(Dual Circuit)						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
527	690423	Clamp-Tube	577	690795	Cable-Starter	629	807004	Spring-Throttle Return
529	690744	Grommet	578	692306	Wire Assembly			----- Note -----
529A	691527	Grommet	578A	844547	Wire Assembly			806716 Spring-
532	691115	Nut (Mounting Bracket) Used on Type No(s). 0005, 0145, 0281.	578C	690809	Wire Assembly Used on Type No(s). 0027, 0112, 0113, 0114, 0120, 0127, 0143, 0183, 0187, 0197, 0207, 0234, 0235, 0266, 0267, 0274, 0278, 0315, 0318, 0327, 0527, 1127, 1187, 1266.			Throttle Return Used on Type No(s). 0005, 0145, 0281.
544		Armature-Starter (For Replacement Armature, Order Reference 309)				629A	806717	Spring-Throttle Return Used on Type No(s). 0005, 0145, 0281.
544A		Armature-Starter (For Replacement Armature, Order Reference 309)	578D	692961	Wire Assembly Used on Type No(s). 0005, 0145, 0281.	633	806131	Seal-Choke/Throttle Shaft
552	690701	Bushing-Governor Crank	578E	691999	Wire Assembly	633A	690722	Seal-Choke/Throttle Shaft
552A	806686	Bushing-Governor Crank	578F	845849	Wire-Assembly	633B	807003	Seal-Choke/Throttle Shaft Used on Type No(s). 0218, 0252, 0328, 1409, 1410, 2218, 3052.
555	692067	Screw (Starter Solenoid)	587	698024	Clamp-Cable	635	692076	Boot-Spark Plug
561	690713	Nut (Control Lever)	587A	807116	Clip	637	806999	Washer (Throttle Shaft)
562	690239	Bolt (Governor Control Lever)	592	690939	Nut (M6) (Rewind Starter)	637A	807000	Washer (Throttle Shaft)
563	841735	Screw (Debris Screen Guard)	596	691492	Screw (Oil Pump)	638	691551	Washer (Cylinder Head Cover)
564	690677	Screw (Control Cover)	597	690876	Screw (Pawl Friction Plate)	638A	690706	Washer (Cylinder Head Cover)
565	690682	Stud (Oil Filter Adapter)	598	807625	Shim-End Play (Crankshaft or Camshaft Bearing)			
572	690686	Baffle-Breather	601	691038	Clamp-Hose			
573	841310	Plate-Back ----- Note ----- 841311 Plate-Back Used on Type No(s). 0111. 841127 Plate-Back Used on Type No(s). 0126, 0146, 0292, 0320. 841314 Plate-Back Used on Type No(s). 0142.	601A	691522	Clamp-Hose			
			601B	791850	Clamp-Hose			
			604	845821	Cover-Control			
			608	841729	Starter-Rewind			
			613	691902	Screw (Muffler)			
			613A	692067	Screw (Muffler)			
			614	691550	Retainer-Governor Shaft			
			616	806685	Crank-Governor			
			628	806660	Screw (M8x18mm) (Fuel Pump Bracket)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
643	692079	Retainer-Air Filter	643C	845087	Retainer-Air Filter Used on Type No(s).	683	691029	Nut (Starter Solenoid) (Used Before Code Date 10050800).
643A	690447	Retainer-Air Filter			0001, 0007, 0023, 0027, 0068, 0075, 0077, 0078, 0079, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0189, 0190, 0191, 0192, 0193, 0194, 0197, 0205, 0207, 0208, 0209, 0213, 0216, 0220, 0228, 0230, 0231, 0233, 0234, 0235, 0239, 0254, 0255, 0257, 0263, 0266, 0267, 0269, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0327, 0527, 0568, 1124, 1127, 1216, 1266.			----- Note ----- Nut (See Ref 309D For Correct Replacement Starter-Motor) (Used After Code Date 10050700).
643B	844932	Retainer-Air Filter Used on Type No(s). 0004, 0005, 0007, 0013, 0100, 0116, 0117, 0112, 0123, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0150, 0151, 0152, 0153, 0154, 0155, 0157, 0168, 0169, 0173, 0181, 0184, 0186, 0187, 0195, 0196, 0204, 0217, 0218, 0221, 0223, 0226, 0240, 0242, 0243, 0244, 0246, 0253, 0255, 0261, 0262, 0263, 0269, 0270, 0281, 0284, 0286, 0287, 0289, 0291, 0292, 0298, 0301, 0303, 0305, 0310, 0320, 0321, 0322, 0323, 0325, 0328, 1135, 1139, 1144, 1181, 1186, 1187, 1205, 1217, 1226, 1244, 1253, 1261, 1263, 1268, 1269, 1410, 2133, 2206, 2209, 2218, 3075, 3077, 3078, 3087.	650	841233	Screw (Oil Deflector)	689	691272	Spring-Friction
			663	692083	Screw (Control Panel)	691	842826	Seal-Governor Shaft
			664	691087	Nut (Key Switch)	697	692062	Screw (Drive Cap)
			668	691500	Spacer	703	691010	Clip
			668A	691215	Spacer	710	807689	Cover-Oil Filter
			674	692062	Screw (M8x18mm) (Fuel Tank Bracket)	717	692153	Strap/Stud-Air Cleaner Mounting
			674A	692056	Screw (Fuel Tank Bracket)	718	806469	Pin-Locating
			676	795036	Deflector-Muffler Used on Type No(s). 0127, 0143, 0144, 0145, 0150, 0151, 0173, 0213, 0221, 0284, 0288, 1127, 1144, 1216.	718A	690740	Pin-Locating (28MM)
			676A	396903	Deflector-Muffler	718B	841581	Pin-Locating (32MM)
			676B	495518	Deflector-Muffler	723	845818	Seal-Foam
			677	690661	Screw (Muffler Deflector)	725	691498	Shield-Heat
						727	841313	Cover-Starter Drive
						728	691514	Screw (Heat Shield)
						728A	692067	Screw (Heat Shield)
						729	690586	Clip-Wire
						732	690688	Screw (Starter Drive Cover)
						732A	841233	Screw (Starter Drive Cover)
						737	690679	Screw (Oil Filter Adapter)
						737A	841233	Screw (Oil Filter) (M6x10mm)
						741	846085	Gear-Timing
						742	807001	Retainer-E Ring
						773	690875	Retainer
						774	692067	Screw (Stop Wire)
						788	691559	Bracket-Fuel Pump
						788A	844643	Bracket-Fuel Pump Used on Type No(s). 0178, 0203, 0264, 0265, 0271, 0285, 0293.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
789	691996	Harness-Wiring ----- Note ----- 691578 Harness-Wiring Used on Type No(s). 0119, 0135, 0139, 0147, 0177, 0180, 0181, 0184, 0186, 0205, 0239, 0240, 0243, 0244, 0253, 0262, 0271, 0279, 0280, 0286, 0298, 0303, 1135, 1139, 1181, 1186, 1205, 1244, 1253. 841318 Harness-Wiring Used on Type No(s). 0126, 0146.	807	805557	Spacer-Throttle	862	691565	Strap/Stud-Air Cleaner Mounting
			813	690635	Clamp			----- Note -----
			816	690706	Washer (Oil Filter Adapter)			845089 Strap/Stud-Air Cleaner Mounting
			819	692056	Screw (Muffler Bracket)			Used on Type No(s). 0001, 0007, 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0255, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0327, 0527, 0568, 1124, 1127, 1216, 1266.
			819A	690943	Screw (Muffler Bracket)			
			819C	692067	Screw (Muffler Bracket) Used on Type No(s). 0127, 0156.			
			819D	692062	Screw (Muffler Bracket) Used on Type No(s). 0165, 1263.			
			830	809157	Stud-Rocker Arm			
			832	691571	Guard-Muffler			
			833	807084	Screw (Air Cleaner Mounting Strap/Stud)			
789A	844549	Wire Assembly Used on Type No(s). 0005, 0145, 0281.	833A	691593	Screw (Air Cleaner Mounting Strap/Stud)			
789B	698332	Wire Assembly Used on Type No(s). 0213.	836	691514	Screw (Muffler Guard)			
789C	844798	Wire Assembly Used on Type No(s). 0242.	836A	692067	Screw (Muffler Guard)			
789D	845788	Wire Assembly	837	808085	Spacer-Muffler			
797	691029	Nut (Brush Retainer)	842	690611	Seal-O Ring	863	691513	Bracket-Muffler
797A	693167	Nut (Brush Retainer)	843	691322	Sleeve-Lever	863A	690756	Bracket-Muffler Used on Type No(s). 0121, 0127, 0156, 0266, 0267, 0277, 1127, 1266.
801		Cap-Drive (For Replacement Starter Motor, Order Reference 309(A))	849	691088	Screw (Stub Shaft)			
802A	691286	Cap-End	855	845586	Adapter-Air Cleaner Used on Type No(s). 0285, 0293.	865	843768	Cover-Air Guide
803		Housing-Starter (For Replacement Starter Motor, Order Reference 309)				865A	841319	Cover-Air Guide (Aluminum) Used on Type No(s). 0175, 0178, 0193, 0203, 0217, 0230, 0231, 0233, 0239, 0248, 0265, 0285, 1217.
804	844727	Canister-Carbon Used on Type No(s). 0001, 0194, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0523, 0527, 0568, 1124, 1127, 1266.						----- Note ----- 841231 Cover-Air Guide Used on Type No(s). 0236, 0281.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
868	691963	Seal-Valve	920	691656	Solenoid-Starter	920B	845269	Solenoid-Starter
871	692057	Bushing-Valve Guide	920A	825418	Solenoid-Starter			Used on Type No(s).
877	393456	Wire/Connector-Alternator			(Used Before Code Date 10050800).			0007, 0075, 0077, 0078, 0079, 0087, 0130, 0206, 0271, 0294, 0303, 0322, 2206.
877C	399916	Wire/Connector-Alternator			----- Note -----			----- Note -----
877D	698092	Wire/Connector-Alternator			Solenoid Starter			557067 Solenoid-
878	398661	Harness-Alternator			(See Ref 309D For Correct Replacement Starter-Motor)			-Starter
878A	691362	Harness-Alternator			(Used After Code Date 10050700).			Used on Type No(s).
879	842123	Cover-Carburetor						0001, 0003, 0005, 0006, 0013, 0023, 0068, 0075, 0077, 0078, 0079, 0087, 0115, 0116, 0117, 0118, 0124, 0130, 0132, 0133, 0135, 0139, 0144, 0145, 0147, 0155, 0168, 0171, 0172, 0174, 0175, 0180, 0181, 0184, 0186, 0190, 0192, 0205, 0208, 0213, 0216, 0228, 0233, 0239, 0240, 0242, 0243, 0244, 0248, 0253, 0254, 0257, 0261, 0262, 0263, 0268, 0269, 0271, 0272, 0276, 0279, 0280, 0281, 0283, 0284, 0286, 0288, 0290, 0291, 0298, 0301, 0303, 0305, 0308, 0310, 0311, 0316, 0317, 0523, 0568, 1124, 1135, 1139, 1144, 1181, 1186, 1205, 1216, 1244, 1253, 1261, 1263, 1268, 1269, 2133, 3075, 3077, 3078, 3079, 3087.
		----- Note -----						
	842269	Cover-Carburetor						
		Used on Type No(s).						
		0142, 0150, 0151, 0154, 0165, 0169, 0187, 0189, 0191, 0209, 0230, 0231, 0236, 0292, 0320.						
879A	807460	Cover-Carburetor						
	842127	Cover-Carburetor						
		Used on Type No(s).						
		0112, 0187, 0205, 0208, 1187.						
883	691613	Gasket-Exhaust						
884	690898	Clamp-Muffler						
884A	691956	Clamp-Muffler						
		Used on Type No(s).						
		0150, 0151, 0158, 0165.						
892	692318	Switch-Key						
893	820805	Nut						
		(Starter Solenoid)						
		(Used Before Code Date 10050800).						
		----- Note -----						
		Nut						
		(See Ref 309D For Correct Replacement Starter-Motor)						
		(Used After Code Date 10050700).						
899	691077	Washer						
		(Starter Solenoid)						
914	807084	Screw				927	691116	Screw
		(Rocker Cover)						(Electronic Governor Module)
918	791880	Hose-Vacuum						Used on Type No(s).
		(Cut To Length)						0005, 0145, 0281.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
930	841490	Guard-Rewind Used on Type No(s). 0013, 0132, 0151, 0184, 0189, 0223, 0240, 0263, 0290, 0305, 1263.	964	590799	Cap-Connector	971	807084	Screw (Air Cleaner Base to Carburetor) (M6x14mm)	
947	692094	Solenoid-Fuel ----- Note ----- 842239 Solenoid-Fuel Used on Type No(s). 0119.	967	272490s	Filter-Pre Cleaner	972A	845137	Tank-Fuel (Plastic) ----- Note ----- 845138 Tank-Fuel (Plastic) Used on Type No(s). 0002, 0113, 0114, 0115, 0118, 0121, 0156, 0197, 0207, 0220, 0257, 0266, 0267.	
949	845728	Guard-Debris Screen	967A	271794s	Filter-Pre Cleaner	972B	844726	Tank-Fuel Plastic Used on Type No(s). 0001, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0318, 0317, 0318, 0527, 0523, 0568, 1124, 1127, 1266.	
955	807723	Plug-Carburetor ----- Note ----- 808176 Plug-Carburetor Used on Type No(s). 0110, 0111, 0119, 0142, 1409, 1410.	968	699959	Cover-Air Cleaner			----- Note ----- 845771 Tank-Fuel (Plastic) Used on Type No(s). 0325.	
957	795027	Cap-Fuel Tank (Plastic)	968A	841822	Cover-Air Cleaner Used on Type No(s). 0110, 0111, 0119.				
957A	844728	Cap-Fuel Tank (Plastic) Used on Type No(s). 0001, 0194, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0523, 0527, 0568, 1124, 1127, 1266.	968B	844559	Cover-Air Cleaner Used on Type No(s). 0005, 0023, 0068, 0075, 0077, 0078, 0079, 0100, 0116, 0117, 0112, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0152, 0153, 0155, 0156, 0157, 0168, 0169, 0172, 0173, 0177, 0180, 0181, 0184, 0186, 0183, 0187, 0190, 0191, 0192, 0193, 0194, 0195, 0196, , 0197, 0204, 0205, 0207, 0208, 0209, 0213, 0216, 0217, 0220, 0221, 0222, 0223, 0226, 0228, 0233, 0234, 0235, 0239, 0240, 0242, 0243, 0244, 0246, 0253, 0254, 0255, 0266, 0263, 0269, 0267, 0270, 0281, 0287, 0289, 0310, 0322, 1268, 2206, 3087.				
958	692008	Valve-Fuel Shut Off (Plastic) ----- Note ----- 698183 Valve-Fuel Shut Off (Plastic) Used on Type No(s). 0007, 0169, 0170, 0195, 0196, 0204, 0322.							

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
972C	844561	Tank-Fuel Plastic Used on Type No(s). 0194.	987	807002	Seal-Throttle Shaft	1012	690592	Retainer-Link		
			988	692063	Gasket-Oil Adapter	1017	690900	Screen-Oil Pump		
			988A	690687	Gasket-Oil Adapter	1022	806039s	Gasket-Rocker Cover		
			990	691959	Key Set	1023	843749	Cover-Rocker		
			994	794945	Arrestor-Spark	1023B	691494	Cover-Rocker		
			996	691577	Shield-Carburetor	1023C	690910	Cover-Rocker		
			996A	844930	Shield-Carburetor Used on Type No(s). 0004, 0005, 0007, 0013, 0075, 0077, 0078, 0079, 0100, 0116, 0117, 0112, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0150, 0151, 0152, 0153, 0154, 0155, 0157, 0165, 0168, 0169, 0173, 0181, 0184, 0186, 0187, 0189, 0191, 0192, 0193, 0194, 0195, 0196, 0204, 0205, 0208, 0209, 0217, 0218, 0221, 0223, 0226, 0230, 0231, 0240, 0242, 0243, 0244, 0246, 0252, 0253, 0255, 0261, 0262, 0263, 0269, 0303, 0270, 0281, 0284, 0286, 0287, 0289, 0291, 0292, 0298, 0301, 0305, 0310, 0320, 0321, 0322, 0323, 0328, 1135, 1139, 1144, 1181, 1186, 1187, 1205, 1217, 1226, 1244, 1253, 1261, 1263, 1268, 1269, 1410, 2133, 2206, 2209, 3075, 3077, 3078, 3087, 2218.			1023D	691558	Cover-Rocker
								1023E	691531	Cover-Rocker (Used On Engines Equipped With 9 Quart Fuel Tanks)
								1023F	843750	Cover-Rocker Used on Type No(s). 0222.
								1024	843825	Pump-Oil (Used After Code Date 07101400). ----- Note ----- Pump-Oil (Oil Pump Is No Longer Available)(See Reference 18 For Correct Replacement Crankcase Cover). (Used Before Code Date 07101500).
								1025	690689	Spool-Governor
								1026	691836	Rod-Push (Steel)(Intake) ----- Note ----- 691758 Rod-Push (Aluminum)(Exhaust)
			1004	841656	Duct-Air					
			1009	806474	Screw (Starter Motor)					

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1027	842921	Filter-Oil ----- Note ----- 795890 Adaptor-Oil Filter Used on Type No(s). 0320.	1038	844555	Rod-Fuel Shut Off Used on Type No(s). 0001, 0002, 0023, 0027, 0068, 0113. 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0172, 0174, 0177, 0180, 0183, 0190, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0327, 0527, 0523, 0527, 0568, 1124, 1127, 1216, 1266.	1091	691516	Cap-Limiter ----- Note ----- 844448 Cap-Limiter Used on Type No(s). 0005, 0075, 0077, 0078, 0079, 0087, 0100, 0112, 0113, 0114, 0116, 0117, 0126, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0150, 0151, 0152, 0153, 0154, 0155, 0157, 0165, 0167, 0168, 0172-H1, 0173, 0175, 0181, 0184, 0186, 0187, 0189, 0191, 0192, 0193, 0195, 0196, 0203, 0204, 0205, 0206, 0208, 0209, 0217, 0218, 0221, 0223, 0226, 0230, 0233-H1, 0234, 0235, 0236, 0240, 0242, 0243, 0244, 0246, 0248, 0253, 0255, 0261, 0262, 0263, 0268, 0269, 0270, 0271, 0281, 0283, 0284, 0285, 0286, 0287, 0288, 0289, 0290, 0291, 0292, 0293, 0298, 0301, 0305, 0310, 0315, 0317, 0320, 0321, 0322, 1135, 1139, 1144, 1181, 1186, 1187, 1205, 1217, 1226, 1244, 1253, 1261, 1268, 1269, 2133, 2206, 2209, 3075, 3077, 3078, 3087.
1028	808235	Adapter-Oil Filter ----- Note ----- 808033 Adapter-Oil Filter Used on Type No(s). 0003, 0006, 0068, 0132, 0133, 0135, 0143, 0145, 0150, 0165, 0172, 0173, 0174, 0186, 0208, 0213, 0216, 0223, 0228, 0242, 0244, 0248, 0254, 0255, 0276, 0283, 0286, 0288, 0291, 0301, 0305, 0310, 0568, 1135, 1186, 1216, 1244, 2133.	1046	692082	Plug-Blower Housing	1095B	842723	Gasket Set-Valve
1028A	492687	Adapter-Oil Filter Used on Type No(s). 0221, 0222.	1046A	843068	Plug-Blower Housing	1100	791959	Pivot-Rocker Arm
1029	807323	Arm-Rocker	1047	841580	Shaft-Stub	1119	691552	Screw (Alternator) ----- Note ----- 841835 Screw (Alternator) Used on Type No(s). 0111.
1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)	1047A	844148	Shaft-Stub Used on Type No(s). 0150, 0154, 0178, 0193, 0221, 0264, 0270, 0285, 0323, 0325. ----- Note ----- 844149 Shaft-Stub Used on Type No(s). 0217, 1217.	1133	690342	Screw (Crankshaft)
			1048	690669	Module-Electronic Governor Used on Type No(s). 0005, 0145, 0281.			
			1048A	845556	Module-Electronic Governor			
			1051	691124	Ring-Retaining			
			1054	280275	Tie-Cable			
			1058	279771	Operator's Manual			
			1059	698516	Kit-Screw/Washer			
			1068	845143	Clamp-Hose			
			1085	809093	Module-Ignition			
			1090	691293	Retainer-Brush ----- Note ----- 825412 Retainer- Brush Used on Type No(s). 0111, 0126, 0146.			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1176	842067	Nut (Exhaust Manifold)	1425	844712	Hose-Purge Line (Cut To Length) Used on Type No(s). 0013, 0075, 0077, 0078, 0079, 0087, 0217, 0230, 0231, 0240, 0242, 0243, 0246, 0252, 0262, 0264, 0265, 0268, 0276, 0277, 0284, 0285, 0286, 0287, 0289, 0291, 0292, 0293, 0298, 0301, 0303, 0305, 0320, 0321, 0322, 0328, 1135, 1139, 1144, 1181, 1186, 1187, 1205, 1217, 1226, 1244, 1253, 1261, 1263, 1268, 1269, 2133, 2206, 2209, 2218, 3075, 3077, 3078, 3079, 3087.	1431	844035	Washer (Hose-Purge Line) Used on Type No(s). 0075, 0077, 0078, 0079, 0087, 0217, 0230, 0231, 0240, 0243, 0246, 0252, 0264, 0265, 0268, 0276, 0277, 0285, 0287, 0289, 0292, 0293, 0320, 1217, 1268, 3075, 3077, 3078, 3079.
1231	692067	Screw (Ignition Module)				1442	844797	Solenoid-Idle Down Used on Type No(s). 0242.
1254	807084	Screw (M6x14mm) (Rocker Cover Stud)				1455	845813	Lever-Actuator
1271	697261	Inverter				1456	845815	Bracket-Stepper Motor
1272	697260	Gasket-Inverter				1457	845819	Stepper Motor
1301	845823	Nut (Wire Harness) (#8-32)				1458	845812	Screw (Stepper Motor)
1319	794467	Label-Warning				1459	845820	Screw-Set
1323	699146	Receptacle-Powerlink				1460	845822	Bracket-Governor Control
1330	272144	Repair Manual				1461	845824	Eng Control Unit (ECU)
1344	841129	Cable-Choke				1462	792629	Screw (ECU)
1346	492031	Valve-Oil Drain Shut Off Used on Type No(s). 0150, 0152, 0189, 0223.	1425A	8445717	Hose-Purge Line (Cut To Length) Used on Type No(s). 3075, 3077, 3078, 3087.	1463	845825	Kit-Electronic Governor Conversion
1392	690939	Nut (M6) (Rewind Guard)						
1416	807468	Cap-Carburetor Used on Type No(s). 0222, 3052, 3075, 3077, 3078, 3087.						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

Not for
Reproduction

Not for
Reproduction

